



Allen-Bradley

SLC 500 Fast Analog I/O Module

**Catalog Numbers 1746-FI04I and
1746-FI04V**

User Manual

**Rockwell
Automation**

Important User Information

Solid state equipment has operational characteristics differing from those of electromechanical equipment. Safety Guidelines for the Application, Installation and Maintenance of Solid State Controls (publication SGI-1.1 available from your local Rockwell Automation sales office or online at <http://literature.rockwellautomation.com>) describes some important differences between solid state equipment and hard-wired electromechanical devices. Because of this difference, and also because of the wide variety of uses for solid state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.





In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.

WARNING 	Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.
IMPORTANT	Identifies information that is critical for successful application and understanding of the product.
ATTENTION 	Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence
SHOCK HAZARD 	Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.
BURN HAZARD 	Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.

	Preface	
	About This Publication	5
	Who Should Use This Manual	5
	Additional Resources.	6
	Conventions	6
	Chapter 1	
Quick Start	Required Tools and Equipment	7
	Procedures	8
	Chapter 2	
Install and Wire the Modules	Determine the Module's Power Requirements	11
	Determine Compatibility with Other I/O Modules.	12
	Configure Input Channels	13
	Select the I/O Rack Slot.	14
	Install the Module.	14
	Considerations When Wiring	16
	Minimize Electrical Noise Interference	18
	Wire the Module.	18
	Minimize Ground Loops	20
	Label the Terminal Block.	21
	Chapter 3	
Access Files to Configure I/O	Click and Drag Configuration	23
	Read IO Config Method.	24
	Chapter 4	
Processor and Module Considerations	Processor Considerations.	30
	Module Considerations	32
	Chapter 5	
Write Ladder Logic	Retentive and Non-retentive Programming	39
	Detect an Out-of-range Input.	41
	Overview of Scaling Inputs and Outputs	42
	Scale an Analog Input and Detect an Out-of-range Condition	44
	Scale an Analog Output.	47
	Scale Offsets When >32,767 or <32,768.	49
	Range-check an Analog Input and Scale It for an Output	52
	PID Control with Analog I/O Scaling	56

Calibrate the Module	Chapter 6	
	Calibration Tradeoffs	61
	Calibrate an Analog Input Channel	62
Test Module Operation	Chapter 7	
	Test the SLC 500 System	67
	Test the Module	67
Maintenance and Safety	Chapter 8	
	Preventive Maintenance.	75
	Safety Considerations When Troubleshooting.	76
Module Specifications	Appendix A	
	General Description	77
	Specifications	77
2's-complement Binary Numbers	Appendix B	
	Use 2's-complement Binary Numbers.	83
Module Input and Output Circuits	Appendix C	
	87
	Index	

About This Publication

Read this preface to familiarize yourself with the rest of the manual. This preface covers the following topics:

- Who should use this manual
- The purpose of this manual
- Terms and abbreviations
- Conventions used in this manual
- Allen-Bradley support

This manual is a reference guide for the 1746-NR4 RTD/Resistance Input Module. The manual:

- gives you an overview of system operation.
- explains the procedures you need to install and wire the module at the customer site.
- provides ladder programming examples.
- provides an application example of how this input module can be used to control a process.

Who Should Use This Manual

Use this manual if you are responsible for designing, installing, programming, or troubleshooting control systems that use Allen-Bradley small logic controllers.

You should have a basic understanding of SLC 500 products. You should understand programmable controllers and be able to interpret the ladder logic instructions required to control your application. If you do not, contact your local Allen-Bradley representative for information on available training courses before using this product.

Additional Resources

The following documents contain information that may be helpful to you as you use Allen-Bradley SLC products.

Resource	Description
SLC 500 Systems Selection Guide, publication 1747-SG001	An overview of the SLC 500 family of products
SLC 500 Module Hardware Style User Manual, publication 1747-UM011	A description on how to install and use your modular SLC 500 programmable controller
Installation & Operation Manual for Fixed Hardware Style Programmable Controllers, publication 1747-6.21	A description on how to install and use your fixed SLC 500 programmable controller
SLC 500 Instruction Set Reference Manual, publication 1747-RM001	A reference manual that contains status file data, instruction set, and troubleshooting information about the software
SLC 500 4-Channel Analog I/O Modules User's Manual, publication 1746-UM005	A resource manual and user's guide containing information about the analog modules used in your SLC 500 system.
Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1	In-depth information on grounding and wiring Allen-Bradley programmable controllers
Application Considerations for Solid-State Controls. publication SGI-1.1	A description of important differences between solid-state programmable controller products and hard-wired electromechanical devices
National Electrical Code, published by the National Fire Protection Association of Boston, MA	An article on wire sizes and types for grounding electrical equipment

You can view or download publications at <http://literature.rockwellautomation.com>. To order paper copies of technical documentation, contact your local Rockwell Automation distributor or sales representative.

Conventions

The following conventions are used throughout this manual:

- Bulleted lists such as this one provide information, not procedural steps.
- Numbered lists provide sequential steps or hierarchical information.

Quick Start

This chapter presents an overview of installation and start-up procedures to help you get the module working quickly.

It refers to full procedures in corresponding chapters of this manual or in other SLC documentation that may be helpful if you are unfamiliar with programming techniques or system installation.

We recommend that you use this chapter in either of two ways.

- Use as a fast installation and start-up guide for the experienced users.
- Use as an overview for using the entire manual for the first-time user.

IMPORTANT

If you have any questions about the abbreviated procedures presented in this chapter, always read the referenced chapters and other recommended documentation before trying to apply the information.

Required Tools and Equipment

Have the following tools and equipment ready.

- Medium flat-head screwdriver
- Medium Phillips-head screwdriver
- Wire strippers
- Utility knife
- Hot-air blower
- Shrink wrap
- Belden 8761 cable or equivalent
- Analog I/O devices for your application
- I/O modules (1746-FIO4I and/or 1746-FIO4V)
- Programming software

Procedures

Follow these steps to get your module running in your SLC system.

1. Plan the inclusion of analog I/O modules in your SLC system.


If a new system, specify the type of processor, number of I/O racks, I/O modules, and power supply. If adding to an existing system:

- assign modules to slot locations in the I/O rack.
- verify that the power supply for the I/O rack can handle the increased load.

See SLC 500 Systems Selection Guide, publication 1747-SG001, for more information.

2. Configure module input channels for current or voltage operation.

Locate the 2-switch assembly on the module's circuit board, and set each channel as follows.

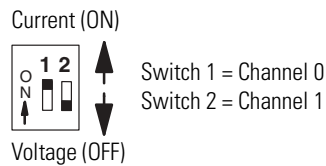


3. Connect I/O devices with cables.

IMPORTANT


- Connect only one end of the cable shield to earth ground.
- Channels are not isolated from each other. All analog commons are connected together internally.
- The module does not provide loop power for analog inputs.
- Use a power supply that matches the transmitter (sensor) specifications.

Refer to Install and Wire the Modules on page 11.

For Differential Inputs

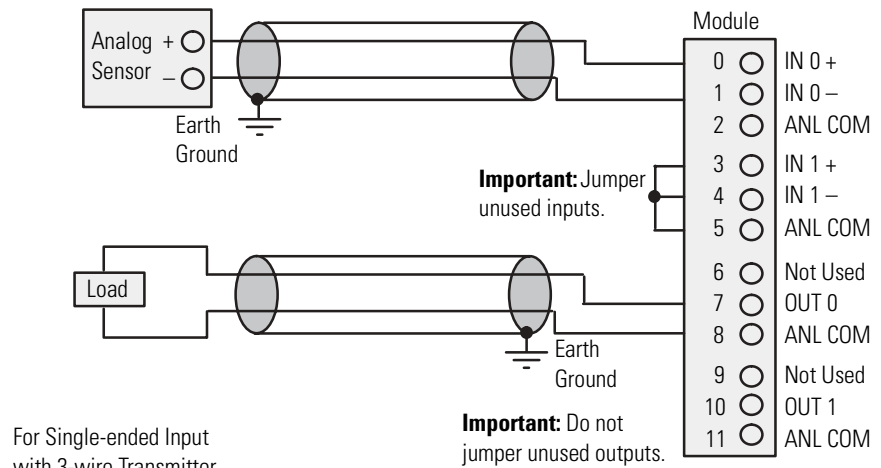

For Single-ended Input with 3-wire Transmitter

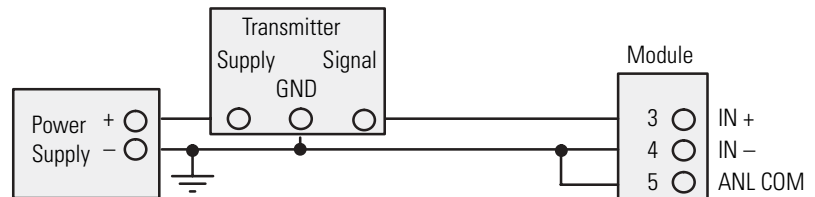

4. Configure the system I/O and module ID.

With the software, configure the processor, I/O racks, slots, and I/O modules.

When assigning an I/O module to a slot location, select the module from the displayed list. If not listed, select OTHER at the bottom of the list and enter the module's ID code at the prompt.

ID code for 1746-FIO4I is 3224

ID code for 1746-FIO4V is 3218

5. Understand A/D & D/A converter resolution on input and output words.


The module's I/O channel converters limit bit usage to less than a full 16-bit word.

The input channel converter resolution is 12 bits, where the highest four bits are always zero.

The output channel converter resolution is 14 bits, where the lowest two bits are never used.

The lowest two bits have no effect on the output value.

Refer to Processor and Module Considerations on page 29 for more information.

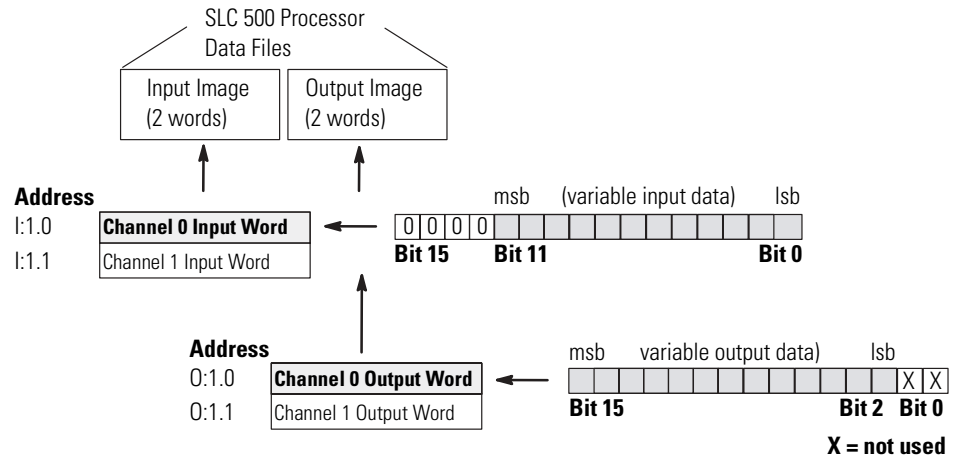

6. Write ladder logic to process the module's analog data.

We provide several programming examples that include the following:

- Clear the output when changing mode or cycling power
- Detect an out-of-range input
- Scale analog outputs
- Scale offsets
- Scale and range-check analog inputs and outputs
- PID control with analog I/O scaling

Study these examples to understand how to program the module.

Refer to Write Ladder Logic on page 39.

7. (Optional) Write ladder logic to maintain calibrated inputs.

We show you how to write ladder logic that provides a calibrated input reference during runtime, and lets you periodically calibrate module inputs. We suggest that you modify the logic examples to suit your application and add them to your application program.

Refer to Calibrate the Module on page 61 for more information.

Install and Wire the Modules

This chapter describes procedures to install fast analog I/O modules in an SLC 500 system. The procedures include the following tasks.

- determine the module's power requirements
- determine compatibility with other I/O modules
- configure input channels
- select the I/O rack slot
- install the module
- consider when wiring
 - using system wiring guidelines
 - grounding the cable
 - determining cable length
- minimize electrical noise interference
- wire the module
- minimize ground loops
- label the terminal block

Determine the Module's Power Requirements

Analog modules require power from the 5V dc and 24V dc backplane power supplies of the SLC 500 system. This table shows the backplane power requirements for fast analog I/O modules.

Current Load

Catalog Number	Current at 5V dc	Current at 24V dc
1746-FI04I	55 mA	150 mA
1746-FI04V	55 mA	120 mA

Use this table to compute the module's portion of total load on the modular system power supply.

For more information, refer to SLC 500 Systems Selection Guide, publication 1747-SG001.

Determine Compatibility with Other I/O Modules

Use the I/O Compatibility chart when using the expansion rack of a fixed controller (1747-L20, 1747-L30, and 1747-L40). The chart determines compatibility of other I/O modules with fast analog modules. Compatibility is solely based on current drawn from the backplane.

For more information, refer to the SLC 500 Fixed Hardware Style Installation and Operation Manual, publication 1747-6.21.

I/O Compatibility

1746-FIO4I	1746-FIO4V	1746 Module
		FIO4I
		FIO4V
• ⁽¹⁾	•	IA4, IA8, IA16
•	•	IB8, IB16
•	•	IB32
•	•	IG16
•	•	IM4, IM8, IM16
•	•	IN16
•	•	IO4
	•	IO8
		IO12
•	•	ITB16, ITV16
•	•	IV8, IV16, IV32
		NIO4I, NIO4V
▽ ⁽²⁾	▽	NO4I, NO4V
		NI4
•	•	NR4
•	•	NT4
•	•	OA8
		OA16
•	•	OB8
		OB16, OB32
	•	OBP16
•	•	OG16
•	•	OV8
	•	OV16
		OV32

I/O Compatibility

1746-FIO4I	1746-FIO4V	1746 Module
	•	OW4
		OW8, OW16
		OX8
	•	BASIC
		BASn
		DCM
		HS
	•	KE
		KE n

⁽¹⁾ The • symbol indicates an allowable combination of 1746 I/O modules.

⁽²⁾ The ▽ symbol indicates an auxiliary 24V dc power supply may be needed.

Configure Input Channels

Your fast analog I/O modules have a two-switch assembly to configure the input channels for either current or voltage operation. The switches are on the module's circuit board. Switch orientation is shown on the nameplate of the module.


Switch Orientation

- ON – Configures channel for current input
- OFF – Configures channel for voltage input

Switches labeled 1 and 2 control the input mode of channels 0 and 1 respectively.

Channels 0 and 1 Input Mode

Current (ON)

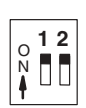

Switch 1 = Channel 0
Switch 2 = Channel 1

Voltage (OFF)

Select the I/O Rack Slot

Two factors determine where you should locate the module in the I/O rack: ambient temperature and electrical noise. Consider the following conditions when selecting an I/O rack slot for the module. Position the module:

- in a slot away from ac or high voltage dc modules.
- away from the rack power supply if installed in a modular system.
- in the I/O rack lowest in the enclosure for a cooler ambient.

Install the Module

When installing the module in an I/O rack, you do not need to remove the terminal block from the module. However, if the terminal block is removed, use the write-on label located on the side of the terminal block to identify the module location and type. To remove the terminal block, grasp it on the top and bottom and pull outward and down.

ATTENTION

Never install, remove, or wire modules with power applied to the I/O rack. Rid yourself of electrostatic charge before handling the module. Electrostatic discharge can degrade module performance or destroy analog circuitry.

IMPORTANT

Do not tamper with the module's factory-sealed potentiometer. It does not require any adjustments.

Follow these steps when installing or removing the module.

1. Verify that input configuration switches 1 and 2 are set correctly.
-

ATTENTION

Take care to avoid connecting a voltage source to a channel configured for current input. This could result in improper module operation or damage to the module.


2. Align the module's circuit board with the rack's card guide.

See *Installing the Module* on page 15.

3. Slide the module in until top and bottom retaining clips are secured.

- 4. To remove the module, press the retaining clips at the top and bottom of the module and slide the module out.

Installing the Module

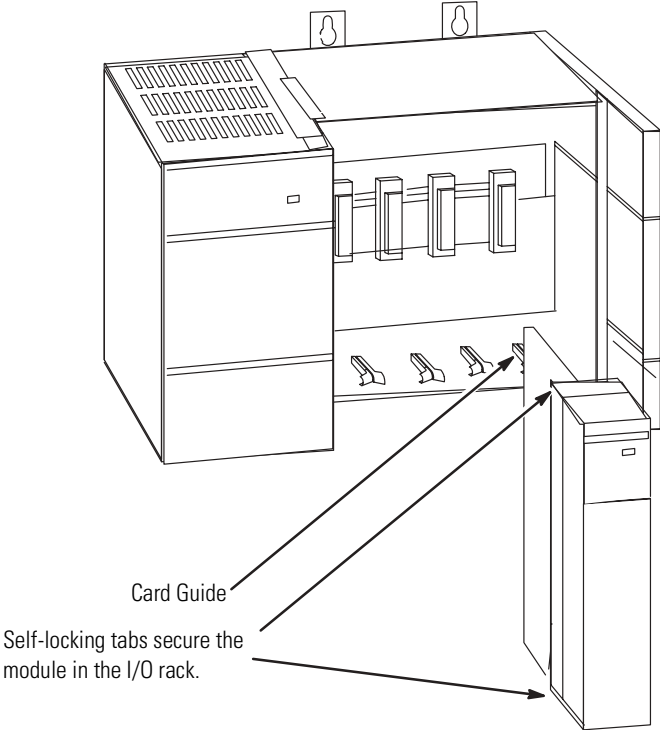

Considerations When Wiring

This section provides guidelines on wiring the system, grounding the cables, determining cable length.

ATTENTION

Before wiring the module, disconnect SLC system power, I/O rack power, and module power.

System Wiring Guidelines


Use the following guidelines in planning the system wiring to the module.

- Analog common terminals (ANL COM) are electrically interconnected inside the module, but not internally connected to earth.
- Voltages on IN+ and IN- terminals must be within 0...20V with respect to ANL COM to ensure proper input channel operation. This is true for current and voltage input channel operation.
- Voltage outputs (OUT 0 and OUT 1) of the 1746-FIO4V module are referenced to ANL COM. Load resistance (R1) for a voltage output channel must be equal to or greater than 1 K Ω
- Current output channels (OUT 0 and OUT 1) of the 1746-FIO4I module source current that returns to ANL COM. Load resistance (R1) for a current output channel must be within 0...500 Ω
- Input connections for single-ended or differential input are the same.

Ground the Cable

Signal cable such as Belden cable #8761 (or equivalent) has two signal wires (black and clear), one drain wire, and a foil shield. The drain wire and foil shield must be grounded at only one end of the cable, not at both ends.

Typical Signal Cable

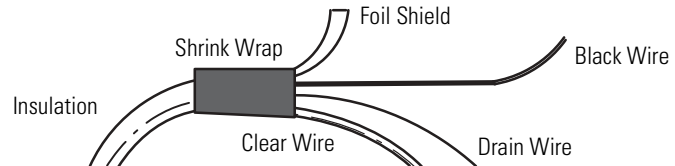

IMPORTANT

Ground the cable shield at one end having a good earth-ground connection, such as at an I/O chassis mounting bolt or nearest ground bus in the I/O enclosure. Make this connection as short as possible. Do not ground the cable at the module's terminal block.

Determine Cable Length

When you determine the length of cable required to connect an I/O device, remember to include additional length to route the drain wire and foil shield to earth ground. Route your cable long enough to avoid areas of high radiated electrical noise, but short enough to avoid signal attenuation.

Minimize Electrical Noise Interference

Because high-speed analog signals are particularly vulnerable to electrical noise, take precautions when routing your signal cables. To help reduce the effects of electrical noise on analog signals, we recommend that you do the following:

- Install the SLC 500 system in a NEMA rated enclosure.
- Make sure that the SLC 500 system is properly grounded.
- Use Belden cable #8761 (or equivalent) for signal wiring.
- Ground the cable properly.
- Route signal cables away from other wiring or in grounded conduit.
- Group these modules away from ac or high-voltage dc modules.

We recommend re-checking system operation after installing new machinery or other sources of electrical noise near the system.

For additional information on this subject, refer to Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1.

Wire the Module

Follow this procedure when wiring your modules.


ATTENTION




Before wiring a module, disconnect power from the SLC 500 system and from any other source to the module.

1. Strip about 7.6 cm (3 in.) of casing to expose the wires at each end of the cable.
2. Twist the drain wire and foil shield together and bend them away from the cable at the grounded end of the cable.

Grounded End

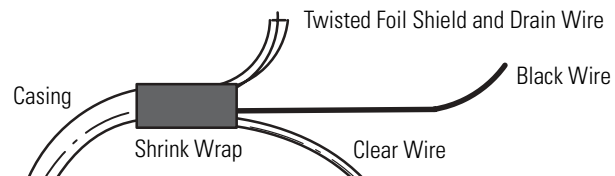

Ungrounded End

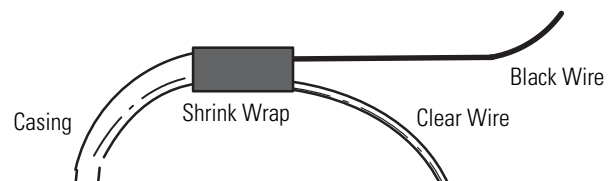


3. Apply shrink wrap where wires leave the casing with the hot-air blower.
4. Cut off the drain wire and foil shield at the other end of the cable.
5. Apply shrink wrap to the junction where wires leave the casing.
6. Trim the signal wires to 5 cm (2 in.) lengths. Strip about 4.76 mm (3/16 in.) of insulation away to expose the copper strands for your connections.
7. Decide where you will connect the cable to earth ground, and ground it.

Refer to Ground the Cable on page 17.

8. Connect signal wires (black and clear) to the terminal block and to the input or output device.

Wiring Diagram for Module, Sensor, and Load (showing differential inputs)

Important: Channels are not isolated from each other.
All analog commons are connected together internally.

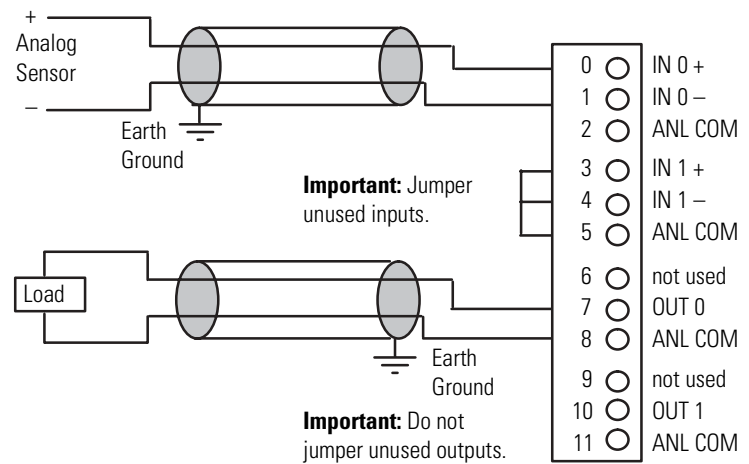


IMPORTANT

Single-ended inputs are less immune to noise than are differential inputs.


Wiring Schematic for Single-ended Current-loop Analog Input Connections

Important: The module does not provide loop power for analog inputs. Use a power supply that matches the transmitter specifications.


2-wire Transmitter

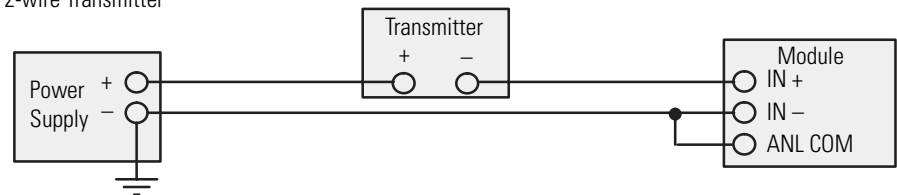

3-wire Transmitter

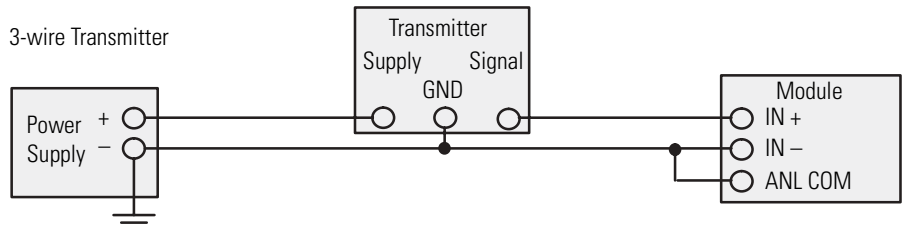

4-wire Transmitter

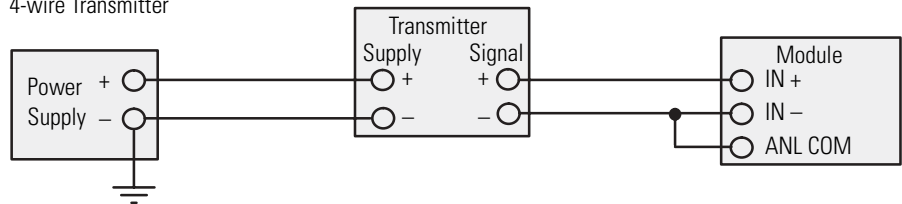

9. Repeat steps 1...6 for each channel. For each unused input channel, jumper together the plus (+), minus (-), and common (ANL COM) terminals. For each unused output channel, do not connect terminals.

Minimize Ground Loops

To keep the ground-loop currents of input circuits to a minimum, we recommend that you:

- use the same power supply to power both input channels of a module.
- otherwise, tie together the grounds of separate power supplies.


See *Wiring Schematic for Single-ended Current-loop Analog Input Connections* for more information.

Label the Terminal Block

The terminal block has a write-on label. Use it to ensure that you install the correct terminal block on the corresponding module.

Terminal Block

Note: The black dot on the label indicates the position of terminal 0.

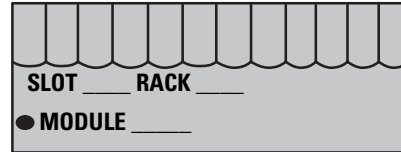


Access Files to Configure I/O

There are two ways to configure the SLC Chassis for a 1746-FIO4I/V module. You can either click and drag items from the list or you can use the Read IO Config method.


Click and Drag Configuration

Follow these steps to configure the SLC chassis by clicking and dragging modules.


1. Double-click the menu item to open the IO Configuration menu in RSLogix500 software.

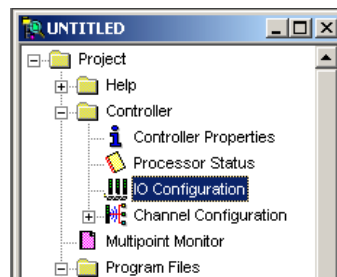

2. Place the 1746-FIO4I/V module into the correct slot by clicking and dragging from the list.

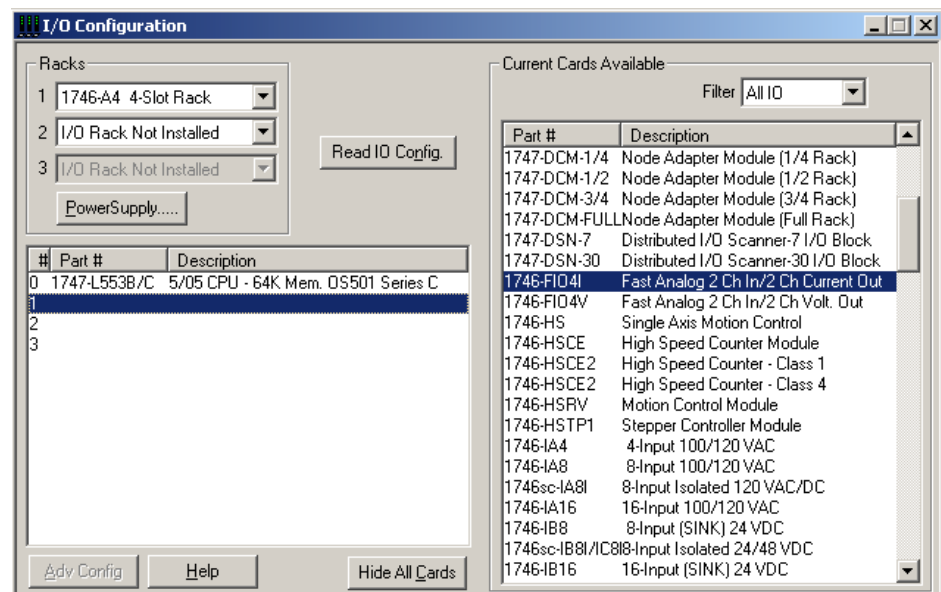


The I/O Configuration is now complete. Each slot shows the corresponding module that is located on the rack. In this example the 1746-FIO4V is in slot 1.

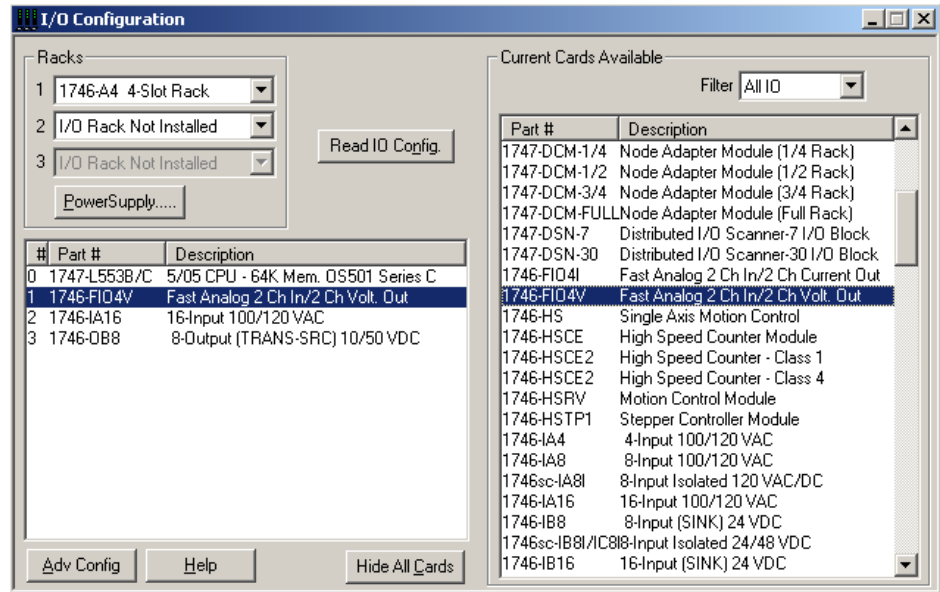


Read IO Config Method

Follow these steps to configure the SLC chassis by using the Read IO configuration method.


1. Double-click the menu item to open the IO Configuration menu in RSLogix500 software.

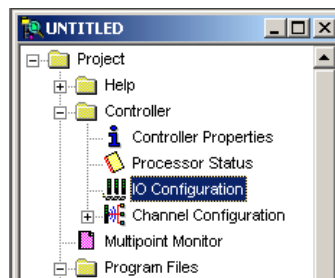

- Place the 1746-FIO4I/V module into the correct slot by clicking Read IO Config.

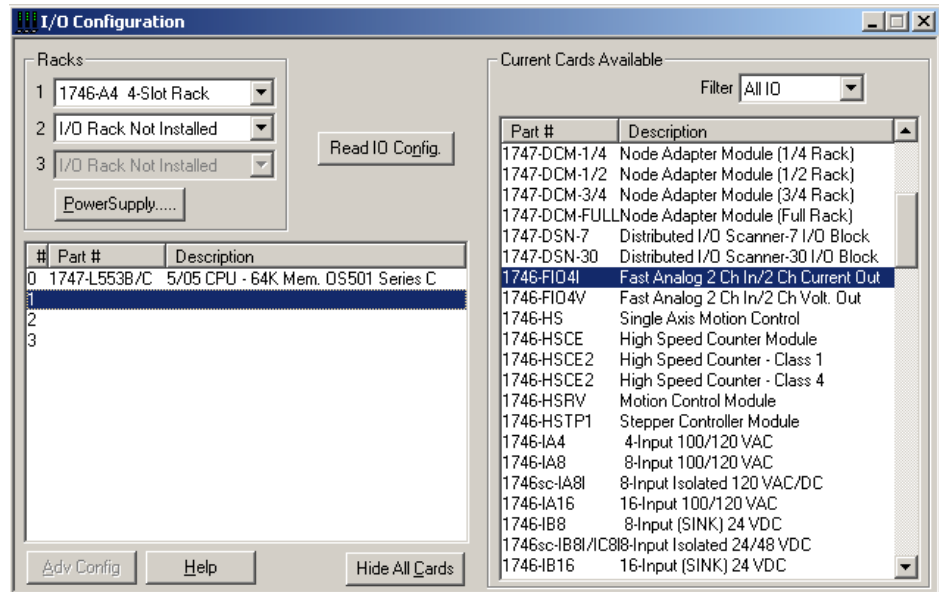


The following screen appears.

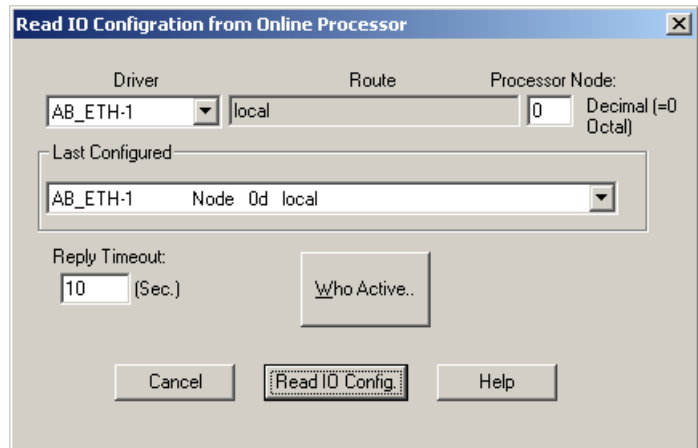

- Select either the driver and processor node number or use the Who Active button to browse for the device.
 - If you selected the driver and node number, proceed to step 5.
 - If you clicked Who Active, the following screen appears.


The Who Active screen lets you browse for the SLC device.

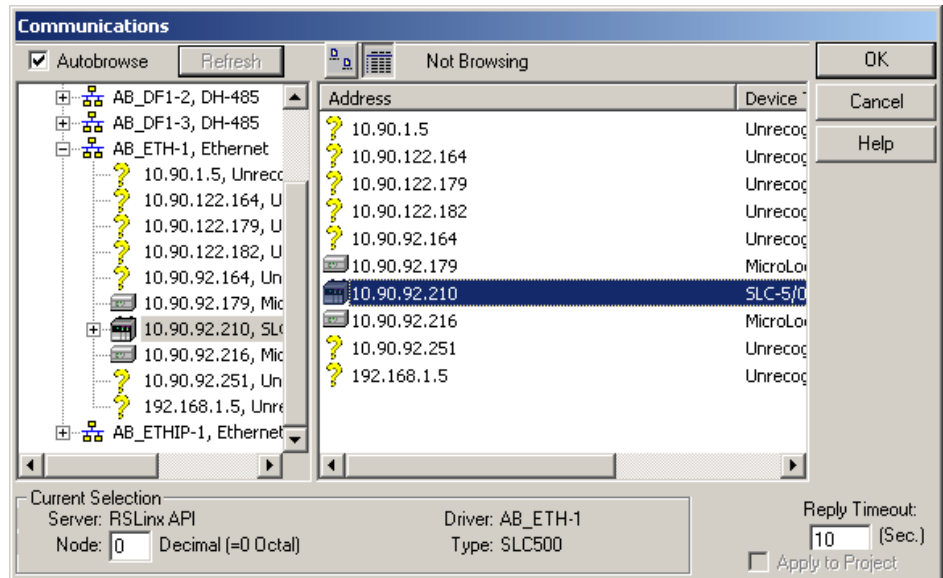


4. Locate the SLC Chassis under the appropriate driver and click OK.

You are brought back to the Read IO Config screen.

5. Click Read IO Config and the rack is populated automatically.

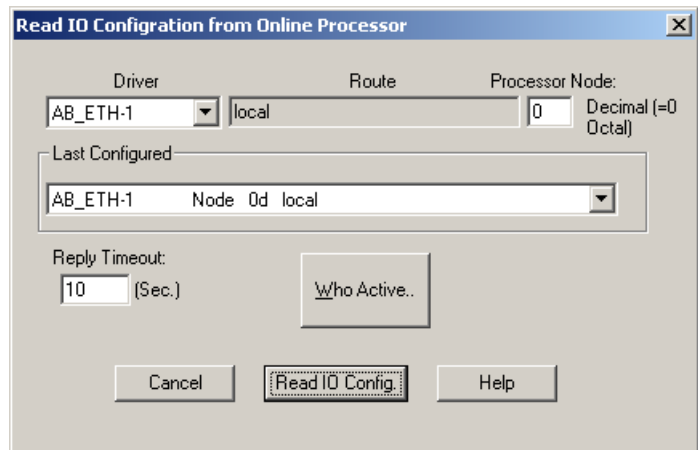

The I/O Configuration is now complete. Each slot shows the corresponding module on the rack. In this example the 1746-FIO4V is in slot 1.

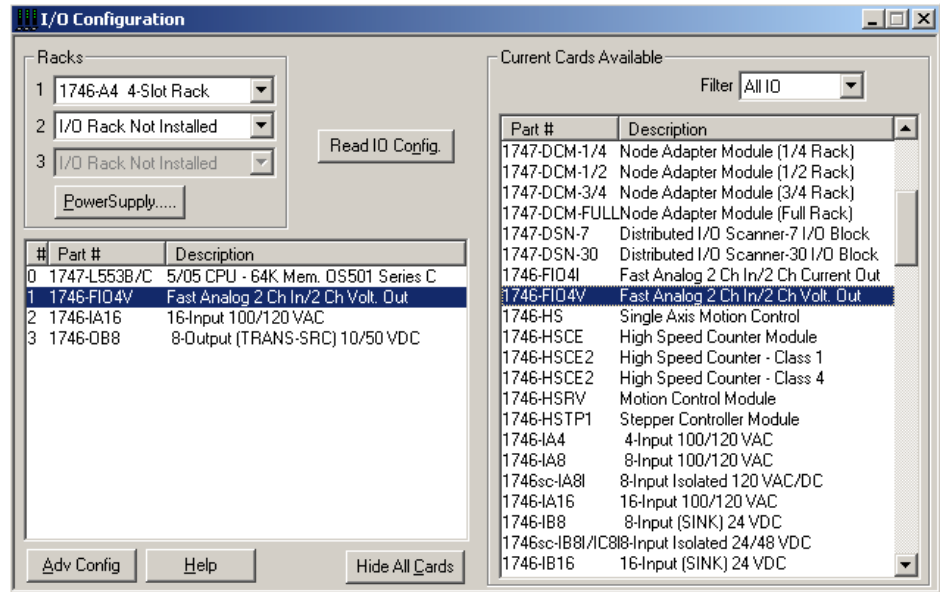

Processor and Module Considerations

This chapter describes concepts that you need to understand to program the fast analog I/O module in an SLC 500 system.

The following are processor considerations.

- Update processor analog I/O data
- Monitor analog I/O data
- Address I/O image words

The following are module considerations.

- Resolve data of the module's I/O channel converters
- Convert analog input data
- Compute the analog input signal level
- Convert analog output data
- Compute the analog output
- Filter input channel
- Compute time delay for A/D conversion
- Determine response to slot disable
- Determine safe state for outputs
- Enter module ID code

Processor Considerations

Knowing how the processor works helps you program it more effectively.

Processor Update of Analog I/O Data

Analog input and output image words are updated by the processor once every processor scan when the processor scans data and program files in succession.

Processor scan time depends largely on the size of your program files: the greater the number of programming instructions, the longer the time to scan the file. Some instructions take longer to scan than others.

For information on processor scan time and instruction execution time, refer to the SLC 500 Instruction Set Reference Manual, publication 1747-RM001.

If an application requires processor updates of analog data more frequently than once per scan, use Immediate Input or Immediate Output instructions. These instructions typically update an analog channel in 1 ms, but also increase the overall scan time by the same amount.

Typical update times for SLC processors are:

- ≈ 10 ms for a typical 1K program.
- 1 ms per analog channel when using immediate I/O instructions.

Monitor Analog I/O Data


You can monitor analog input and output data in binary or decimal format. You select the format by its radix. The default radix is binary. Binary data is presented in 2's-complement format. Changing the radix to decimal lets you view analog I/O data as decimal representations of integer words.

Refer to 2's-complement Binary Numbers on page 83 for more information.

Address I/O Image Words


Each module input channel is addressed as a single word in the processor's input image table and each module output channel is addressed as a single word in the processor's output image table. The module uses a total of two input words and two output words.

Processor I/O Image Words Used by the Module

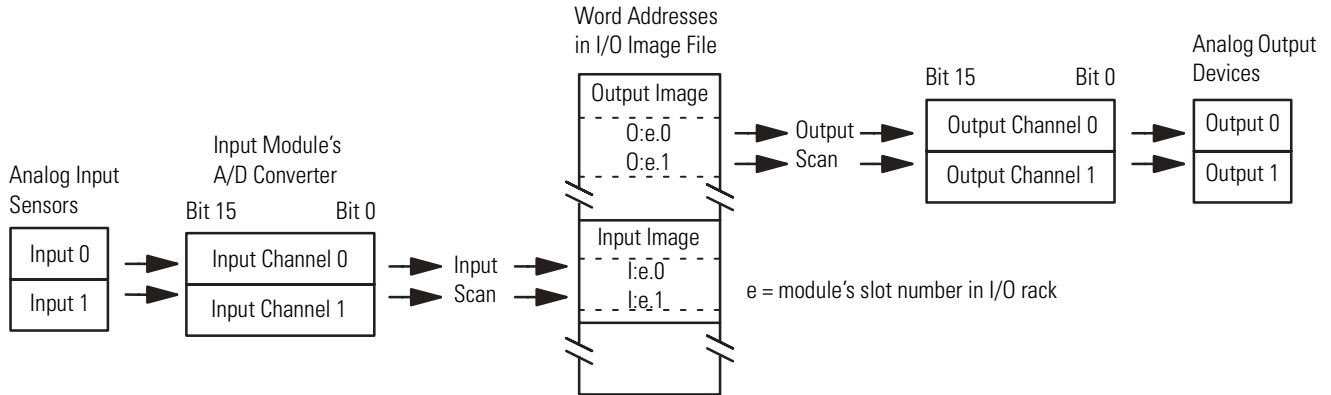

The converted input values from input channels 0 and 1 are addressed as words 0 and 1 of the slot where the module resides. The output values for the output channels 0 and 1 are addressed as output words 0 and 1 of the slot where the module resides.

EXAMPLE You would address the output image word for output 0, word 0, in slot 3 as: 0:3.0 where delimiters : and . must be placed as shown.

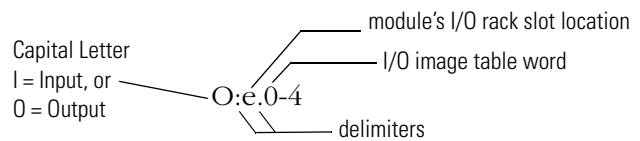


Module Considerations

The module's I/O channel converters affect resolution of I/O data and bit usage in I/O image words. We show you how to compute I/O signal levels. Input filtering and input A/D conversion affect input response time.

Data Resolution of the Module's I/O Channel Converters

The module's I/O channel converters limit bit usage to less than a full 16-bit word when converting analog to digital input data and digital to analog output data. Bit maps show resulting digital data storage in input and output image words.

Bit Usage for I/O Channel Converters

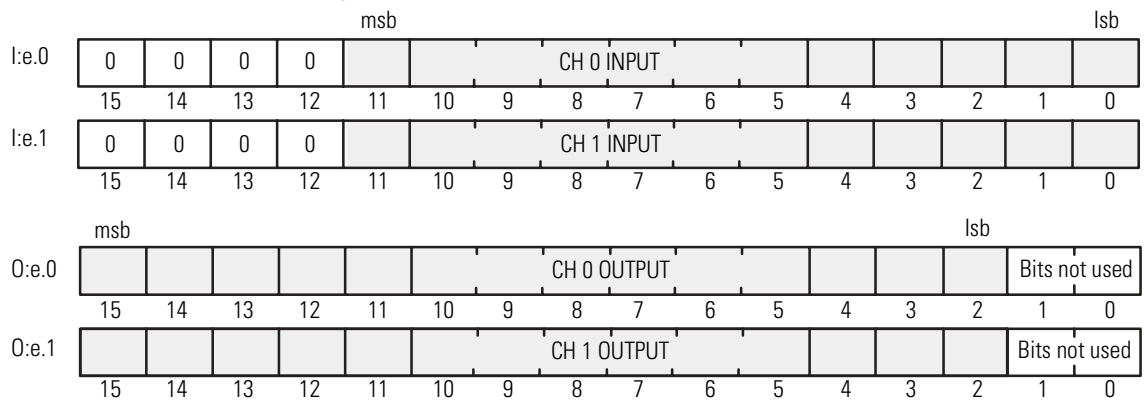

e = module's slot number

The input channel converter resolution is 12 bits, where the highest four bits are always zero. The usable range of the channel word is 0...4095.

The output channel converter resolution is 14 bits, where the lowest two bits are not used. They have no effect on the output value.

IMPORTANT

The module left-justifies the 14-bit data (lsb at bit 2) in the output channel word. This reduces the output resolution to:

- 2.56348 μ A/LSB for current outputs
- 1.22070 mV/SLB for voltage outputs

Convert Analog Input Data

The module converts analog input signals to 12-bit binary values for storage in the input image table.

The decimal range, number of significant bits, and converter resolution depend on the input range that you use for the channel.

Input Range	Decimal Range (input image table)	Significant Bits	Nominal Resolution
0...10V – 1LSB	0...4095	12	2.4414 mV/LSB
0...5V	0...2047	11	
1...5V	409...2047	10	
0...20 mA	0...2047	11	9.7656 µA/LSB
4...20 mA	409...2047	10	

Compute the Analog Input Signal Level

Use the following formula to determine what the analog input signal level (sensor signal) should be for a given decimal value in the input image table.

$$\text{Sensor Signal} = \frac{\text{Full Scale Input}}{\text{Full Scale Count}} \times \text{Input Image Value}$$

For voltage inputs, a full scale input of 10V dc has a full scale count of 4095 and a full scale input of 5V dc has a full scale count of 2047.

$$\text{Sensor Signal} = 2.44 \text{ mV/count} \times \text{Input Image Value}$$

For current inputs, a full scale input of 20 mA has a full scale count of 2047.

$$\text{Sensor Signal} = 0.00977 \text{ mA/count} \times \text{Input Image Value}$$

EXAMPLE

For example, if the input image table value is 409 from a 4...20 mA sensor.

$$\text{Sensor Signal} = \frac{\text{Full Scale Input}}{\text{Full Scale Count}} \times \text{Input Image Value} = 0.00977 \times 409 = 4 \text{ mA}$$

Convert Analog Output Data

The module converts 16-bit binary values from the output image table to 14-bit analog output signals and left-justifies the bit code in the channel word. The output range, decimal representation for the output range, number of significant bits, and converter resolution are as shown in the following table.

Analog Output Data

Module	Output Range	Decimal Representation (output image table)	Significant Bits	Resolution
FIO4I	0...21 mA – 1LSB	0...+32,764	13 bits	2.56348 µA/LSB
	0...20 mA	0...+31,208	12.92 bits	
	4...20 mA	6242...31,208	12.6 bits	
FIO4V	–10...+10V dc – 1LSB	–32,768...+32,764	14 bits	1,22070 mV/LSB
	0...10V dc – 1LSB	0...32,764	13 bits	
	0...5V dc	0...16,384	12 bits	
	1...5V dc	3277...16,384	11.67 bits	

Compute the Analog Output


Use the following formula to compute the output image-table value (decimal representation) required for a desired analog-output signal level (to the output device).

$$\text{Output Image Value} = \frac{\text{Full-scale Decimal Representation}}{\text{Full-scale Output}} \times \text{Desired Signal Level}$$

EXAMPLE If the module's output range is 4...20 mA and you want to set the output to 4 mA, compute the output image value as follows.

$$\text{Output Image Value} = \frac{31,208}{20 \text{ mA}} \times 4 \text{ mA} \approx 6242$$


IMPORTANT The actual resolution for analog current outputs is 2.56348 $\mu\text{A}/\text{LSB}$, where the 14-bit decimal representation is left justified as follows.

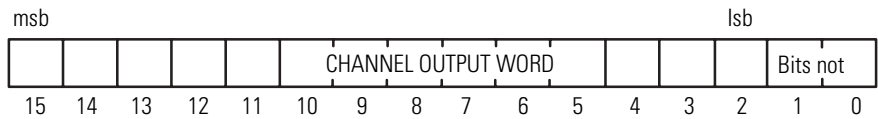

EXAMPLE Use the following formula to compute the output image value if the module's output range is 1...5V dc and you want to set the output to 1V dc.

$$\text{Output Image Value} = \frac{16,384}{5 \text{ V dc}} \times 1 \text{ V dc} \approx 3277$$


IMPORTANT The actual resolution for analog voltage outputs is 1.22070 mV/LSB, where the 14-bit decimal representation is left justified as follows.

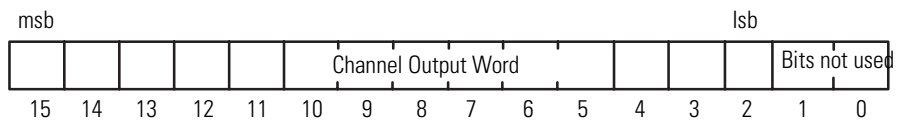

Input Channel Filtering


The module's input filters are designed to attenuate less than 1% of the input signal in the 0...1000 Hz range.

Percent of Signal Passed

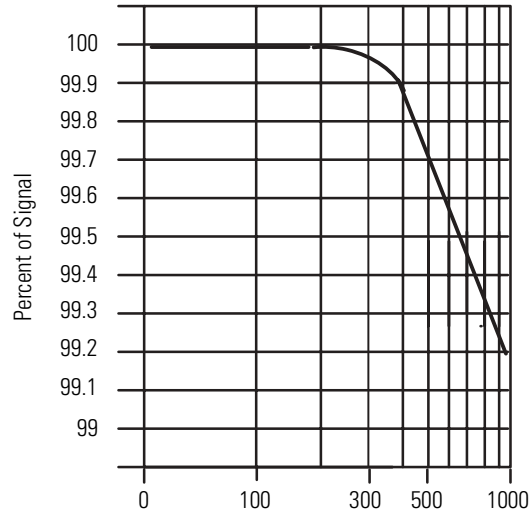


The -3dB point is approximately 7000 Hz. The input filter causes a signal delay of approximately 100 μ s. The module's A/D converter sees a 95% step change of an input signal in that time.

Input Channel Frequency Response

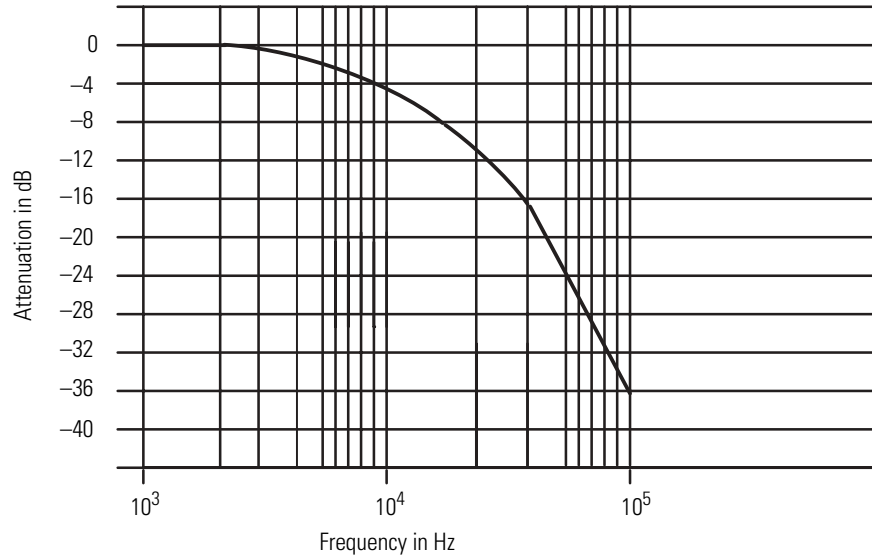

Time Delay for A/D Conversion

The A/D converter uses 7.5 μs for data conversion, 248.5 μs for data settling, and 256 μs for data transfer to the backplane. New data is available in 512 μs cycles.

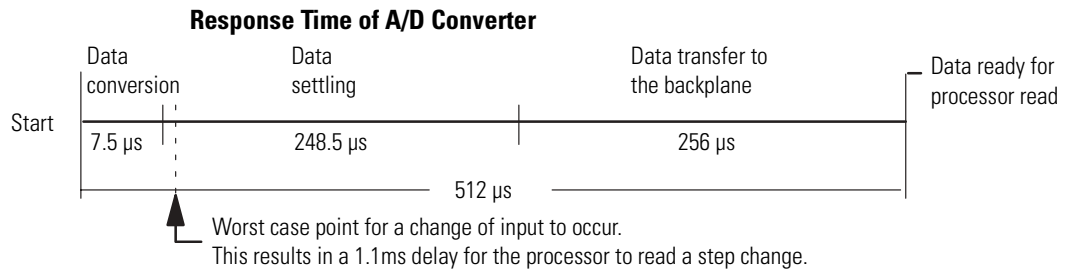

The worst-case specification for the SLC processor to read a step change is 1.1ms between readings. This is true for a step change occurring just after data conversion (first 7.5 μs of the 512 μs cycle). In this case, the read cycle cannot begin until the next data conversion.

IMPORTANT

Do not attempt to read data from the module more often than once every 512 μs . If you do, the module may not be able to update new data.

Response to Slot Disable

You can disable any I/O rack slot by means of a processor function. Before disabling a slot containing an analog I/O module, be aware of the implications.

ATTENTION

Clearly understand the safety implications of disabling an analog module slot before doing it.



Input Response to Slot Disable

The module continues to update its inputs for transfer to the processor, but the processor:

- does not read inputs from the module in a disabled slot.
- retains the last-state input image table values.
- upon re-enabling the slot, reads current inputs in the subsequent scan.

Output Response to Slot Disable

While the module holds its outputs in their last state, the processor:

- may update its output image table.
- does NOT transfer output image table values to the module.
- upon re-enabling, transfers the current output image in the subsequent scan.

Safe State for Outputs

Whenever an SLC 500 system is **not** in RUN mode, the analog module's outputs are automatically forced to 0V or 0 mA by the SLC 500 system. This occurs when the processor is in one of the following modes:

- Fault
- Program
- Test

ATTENTION

When designing and installing the SLC 500 system, place devices connected to analog output channels in a safe state whenever the analog output is zero (\pm the offset error). Determine which output conditions must be held ON for a safe state.

Module ID Code

You must enter the ID code if your programming software does not include the subject I/O module in its list of modules.

ID code for FIO4I is 3224
ID code for FIO4V is 3218

Write Ladder Logic

This chapter presents these programming examples.

- Retentive and non-retentive programming
- Detect an out-of-range input
- Scale analog inputs and detect an out-of-range condition
- Scale analog outputs
- Scale offsets when $> 32,767$ or $< -32,768$
- Scale and range-check analog inputs and outputs
- PID control with analog I/O scaling

IMPORTANT

We present programming examples for instructional purposes only. Because of the many variables and requirements associated with any application, Rockwell Automation cannot assume responsibility or liability for actual use based on these examples.

Retentive and Non-retentive Programming

The processor's automatic response for scanning the I/O image table is described below.

Processor Automatic Response

Conditions	Processor Response
<ul style="list-style-type: none"> • Mode is switched to Program • Power is turned OFF 	Retains the last values in the I/O image table
<ul style="list-style-type: none"> • Mode is switched to Run • Power is turned ON 	Transfers output image data to the module and input image data from the module
<ul style="list-style-type: none"> • Processor detects a minor fault 	Resets analog outputs to zero, but retains output image values
<ul style="list-style-type: none"> • Fault condition is corrected 	Transfers output image data to the module


We give you the following examples for programming a different response.

- Retentive analog output
- Non-retentive analog output
- Clear the output for changing mode or cycling power

Retentive Analog Output

This example loads a program constant into an analog output channel. Consider a digital I/O module in slot 1, and an analog I/O module in slot 2. When bit 0 of the digital I/O module is set, the rung is true, and the full-scale value of 32,764 is moved into the output image table location corresponding to slot 2, analog output channel 0. At the end of the scan, the value is transferred to the module and converted to a corresponding full-scale voltage or current output.


Retentive Example

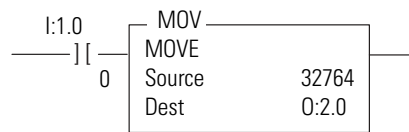

Non-retentive Analog Output


This example loads a program constant into an analog output channel and clears it, based on logical conditions. Consider a digital I/O module in slot 1, and an analog I/O module in slot 2. When bit 0 is set in word 0 of the digital I/O module, the first rung is true and the full-scale value of 32,764 is transferred to channel 0. When the bit is reset to zero, the second rung is true, and the value of zero is transferred to the channel.

Non-retentive Example

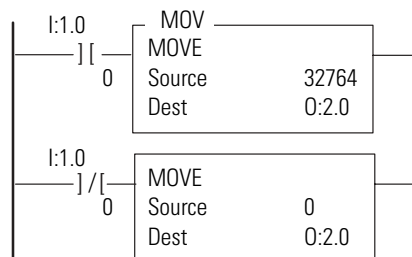

Clear the Output for Changing Mode or Cycling Power


This example clears analog output channel 0 during the initialization scan (first processor scan). The first pass bit, S2:1/15, in the Status File is used to initialize the analog output when you apply power in the RUN mode or upon setting the processor to the RUN or TEST mode. This bit goes ON automatically only for the first-pass scan. To clear another analog output channel, use another rung with a different MOV destination address. The analog module is in slot 2.

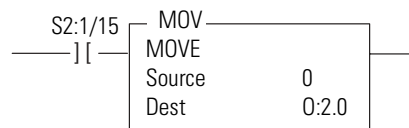


Detect an Out-of-range Input

Analog modules do not provide an input out-of-range signal to the processor. However, if this feature is critical to a specific application, you can program the processor to provide this function.

The following program applies to all SLC 500 processors. It uses comparison instructions (LES and GRT) to check for analog input values which exceed low and high limits respectively. Whenever this happens, the program latches a bit that could serve to trigger an alarm elsewhere in your ladder program. In this example, the input range is 1...5V dc (decimal range of 409...2047).

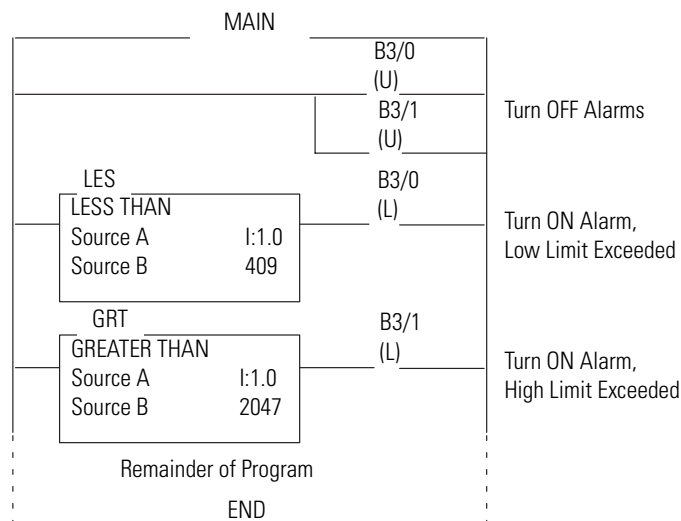

We present an alternative program for SLC 5/02 (and later) processors. It uses a single Limit Test instruction that checks low and high limits. Whenever the input value exceeds a limit, this program latches a bit that could trigger an alarm elsewhere in your ladder program. In this example, the input range is 0...10V dc (decimal range of 0...4095). If the input range were 4...20 mA, the low and high limits would be 2047 and 408, respectively.

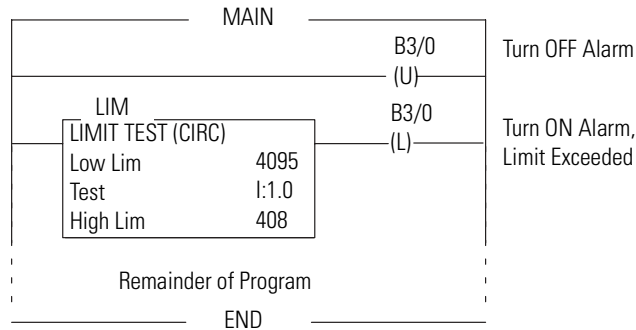

In both examples, the analog input value is in word 0 of slot 1 (I:1.0).

Overview of Scaling Inputs and Outputs


Scaling is the application of a ratio on the variable to be scaled, where the ratio is the scaled range (Δy) to the input range (Δx).

The purpose for scaling values when programming analog I/O modules is to change data format.

Scaling Inputs and Outputs

When you scale	You start with this data format	And typically change the format to
Inputs	Decimal input range in raw counts (from the module's A/D converter)	Engineering units such as PSI (stored in the data table)
Outputs	Integer values from the data table (or from the input image table)	Decimal output range in raw counts to match the module's output range
On a linear graph	Δx	Δy

We illustrate input and output scaling, the source and type of data to be scaled, and the type and destination of the scaled data.

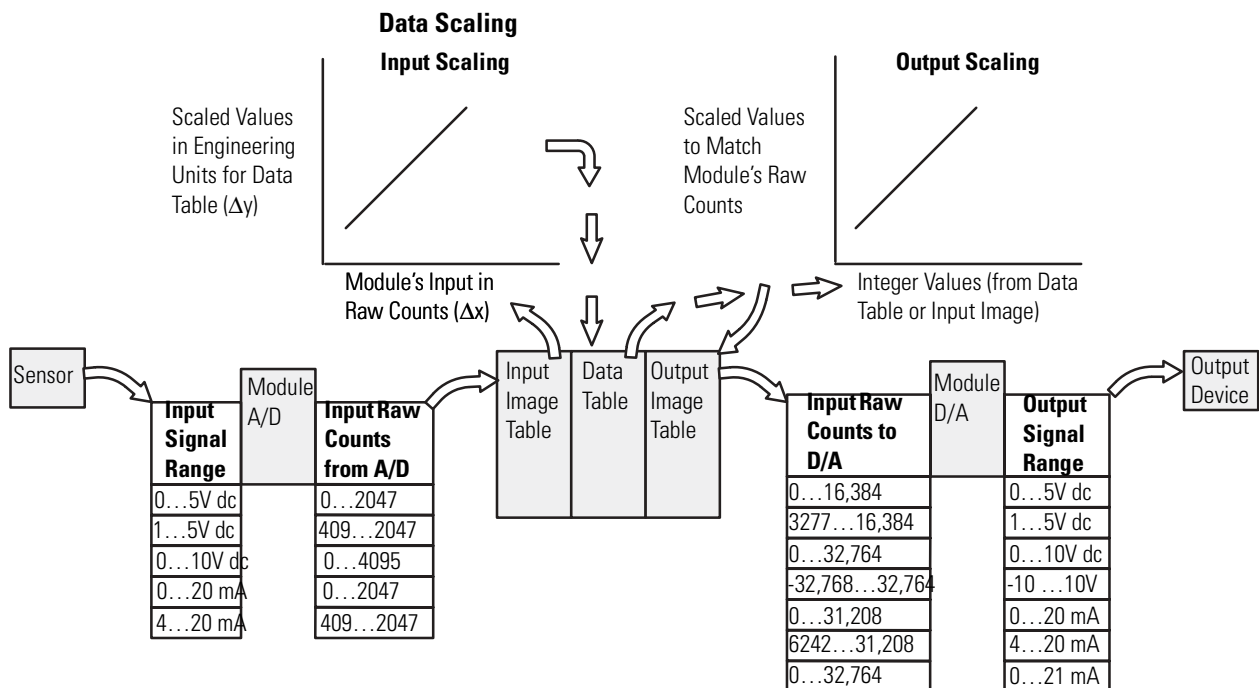

You scale data with ladder logic using arithmetic instructions such as add, multiply, and double divide; or by using the scaling instruction available with SLC 5/02 (or later) processors. The scaling computation is as follows:

$$\begin{aligned} \text{Scaled value} &= (\text{input value} \times \text{slope}) + \text{offset} \\ \text{Slope} &= \Delta y / \Delta x = \text{scaled range} / \text{input range} \\ &= (\text{scaled max.} - \text{scaled min.}) / (\text{input max.} - \text{input min.}) \\ \text{Offset} &= \text{scaled min.} - (\text{input min.} \times \text{slope}) \end{aligned}$$

In this context, the input value and input range are inputs to the scaling function, not necessarily inputs associated with the sensor input.

Scale an Analog Input and Detect an Out-of-range Condition


The following example shows input range checking and scaling the analog input to engineering units for a 1746-FIO4V analog input module.

We are making the following assumptions:

- The 1746-FIO4V module is located in slot 3 of a modular system.
- A pressure sensor with a 0...10V dc output is wired to input channel 1.
- The sensor signal voltage is proportional to a range of 100...500 PSI.
- The process pressure must stay between 275...300 PSI.
(If the pressure deviates from this range, your logic sets an alarm bit.)
- Data is presented in PSI for monitoring and display purposes.

Input Scaling

The scaling operation is displayed in the following graph. It displays the linear relationship between the input and the resulting scaled values.

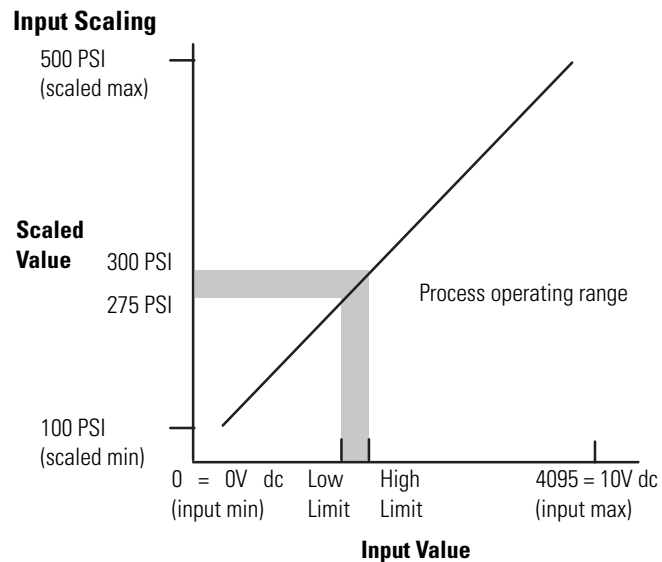

Calculate the Linear Relationship

Use the following equations to express the linear relationship between the input value and the resulting scaled value.

Scaled value = (input value x slope) + offset

$$\text{Slope} = (\text{scaled max} - \text{scaled min}) / (\text{input max} - \text{input min}) \\ (500 - 100) / (4095 - 0) = 400/4095 = 0.0977$$

$$\text{Offset} = \text{scaled min} - (\text{input min} \times \text{slope}) \\ (100 - (0 \times [400/4095])) = 100$$

Scaled value = (input value x [0.0977]) + 100

Calculate the Out-of-range Limits

Use the following equation to compute low and high out-of-range limits.

Input value = (scaled value – offset) / slope

$$\text{low limit: } (275 - 100) / (0.0977) \approx 1750 \text{ counts}$$

$$\text{high limit: } (300 - 100) / (0.0977) \approx 2750 \text{ counts}$$

Ladder Logic


We present two examples for programming the processor.

The first example uses standard math instructions available in any SLC 500 processor. This ladder logic prevents a processor fault by unlatching the mathematical overflow bit S2:5/0 before the end of the scan.


The second example uses the scaling instruction (SCL) available in SLC 5/02 (and later) processors. The rate parameter is calculated by multiplying the slope by 10,000. If the slope exceeds 3.2767, you cannot use the SCL instruction.

$$\text{rate} = (400/4095) \times 10,000 = 977 \quad (\text{The slope is } 0.0977 \text{ so you can use the SCL instruction.})$$

Standard Math Example

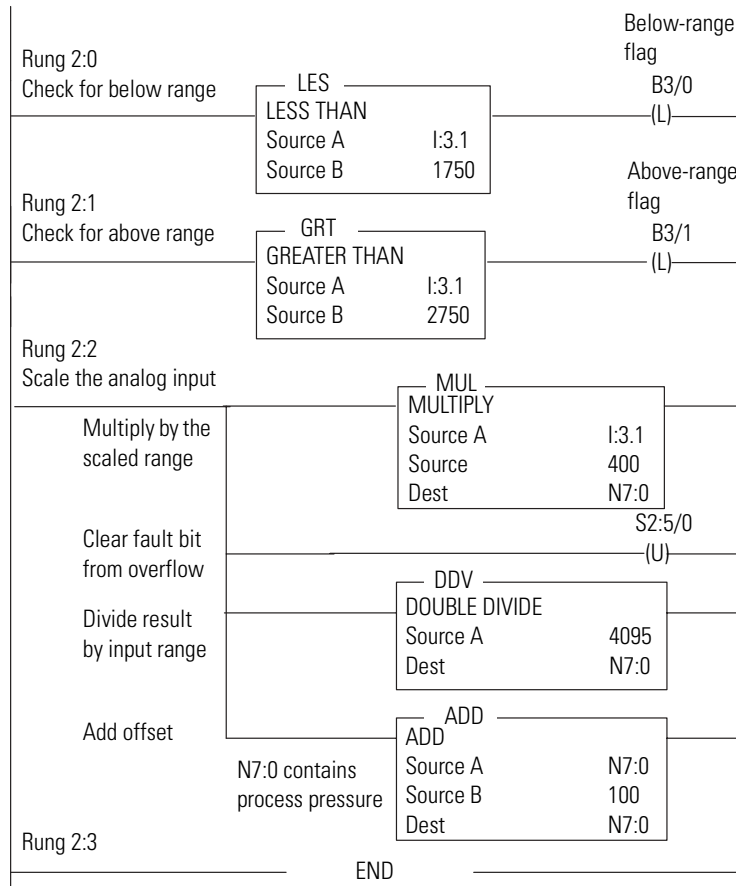

Example Program Using the Scaling Instruction (SCL)

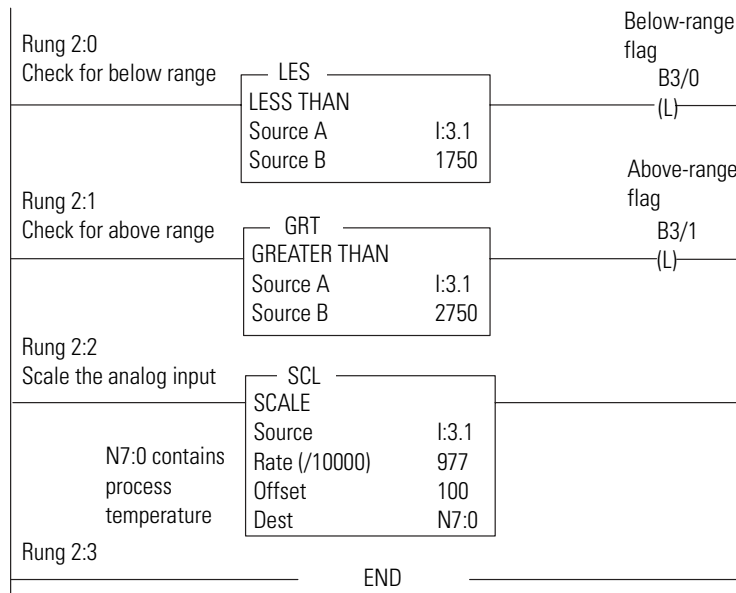


Scale an Analog Output

This example shows the scaling of analog output values to engineering units for monitoring or controlling purposes.

We are making these assumptions.

- The FIO4I module is located in slot 2 of an SLC 500 system.
- An actuator of a flow control valve is wired to output channel 0.
- The actuator accepts a 4...20 mA signal for a 0...100% of valve opening.
- The actuator can not receive a signal out of the 4...20 mA range.
- The percentage of valve opening is manually input to the SLC processor.

This graph displays the linear relationship.

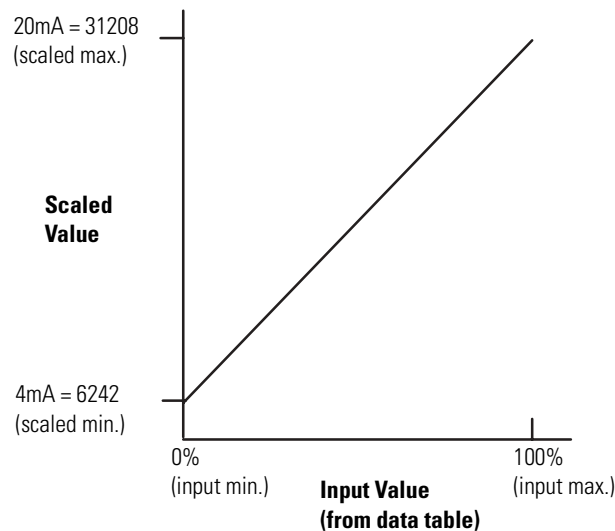

Calculate the Linear Relationship

Use these equations to compute the scaled output value:

$$\text{Scaled value} = (\text{input value} \times \text{slope}) + \text{offset}$$

$$\begin{aligned} \text{Slope} &= (\text{scaled range}) / (\text{input range}) \\ &= (\text{scaled max} - \text{scaled min}) / (\text{input max} - \text{input min}) \\ &= (31208 - 6242) / (100 - 0) = 24966/100 \\ &\text{The slope is greater than 3.2767 so you cannot use SCL instruction.} \end{aligned}$$

$$\begin{aligned} \text{Offset} &= \text{scaled min} - (\text{input min} \times \text{slope}) \\ &= 6242 - [0 \times (24966 / 100)] = 6242 \end{aligned}$$


$$\text{Scaled value} = [\text{input value} \times 24966 / 100] + 6242$$

Ladder Logic

The out-of-range limits are predetermined because any value less than 0% is 6242 and any value greater than 100% is 31,208. The ladder logic checks for out-of-range limits to verify that not less than 4 mA and not more than 20 mA is delivered to the analog output channel.

The following ladder logic uses standard math. It unlatches the mathematical overflow bit S2:5/0 before the end of the scan to prevent a processor fault.


Example Program for Any SLC Processor

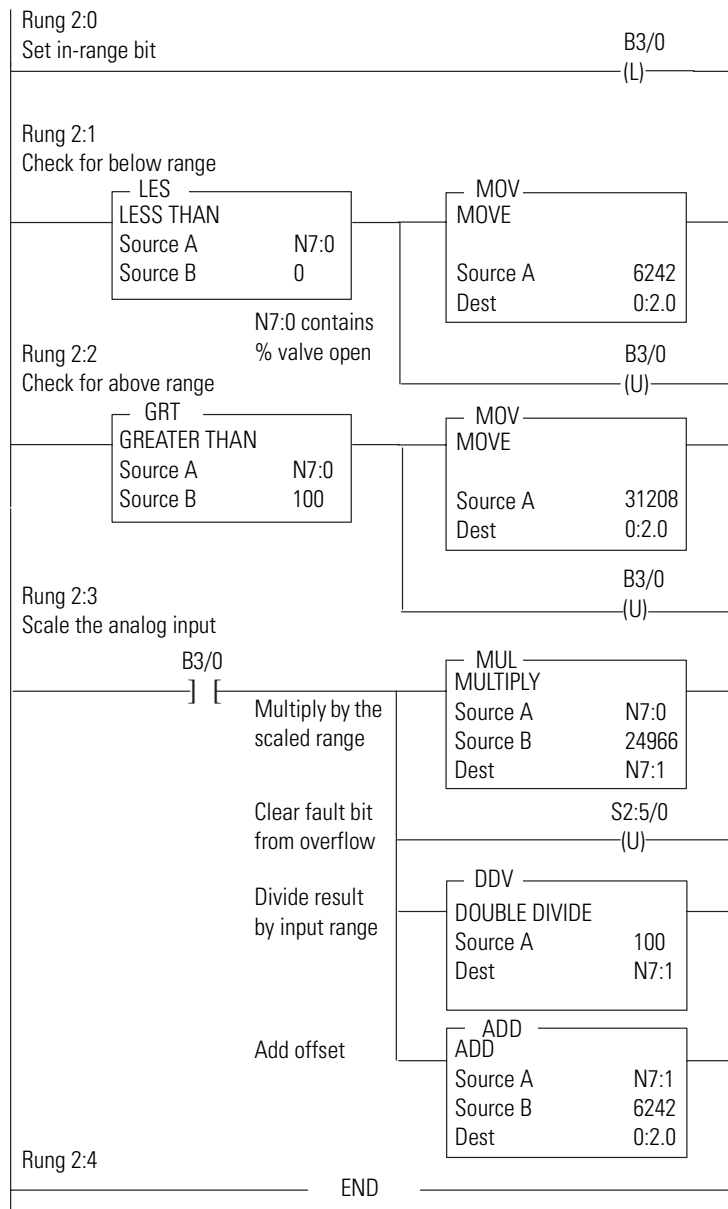

Scale Offsets When >32,767 or <32,768

Some applications may produce an offset greater than 32,767 or less than -32,768, the largest value that can be stored in a 16-bit integer or processed by an SLC processor. If so, you may reduce the magnitude of the offset by shifting the linear relationship along the input value axis. When you compute linear relationships, you will see how the offset is reduced in this manner. The following example applies to a 0.5...9.5V dc output scaled from a narrow input range of 90...100%.

1. First we compute linear relationships and observe that the offset is beyond -32,768.

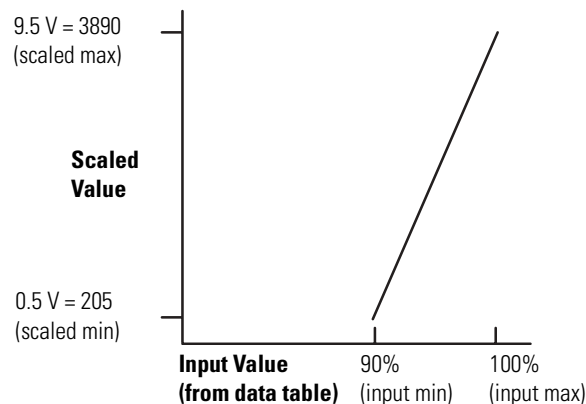

Use the following equations to compute linear relationships:

$$\text{Scaled value} = (\text{input value} \times \text{slope}) + \text{offset}$$


$$\begin{aligned} \text{Slope} &= (\text{scaled max} - \text{scaled min}) / (\text{input max} - \text{input min}) \\ &= (3890 - 205) / (100 - 90) = 3685/10 \approx 369 (> 3.2767 \text{ so you cannot use SCL}) \end{aligned}$$

$$\begin{aligned} \text{Offset} &= \text{scaled min} - (\text{input min} \times \text{slope}) \\ &= 205 - [90 \times (368.5)] = 205 - 33165 = \mathbf{-32,960} \end{aligned}$$

$$\text{Scaled value} = (\text{input value}) \times (368.5) - 32,960$$

Notice the offset is beyond -32,768.

2. Then we shift the linear relationship along the input value axis.

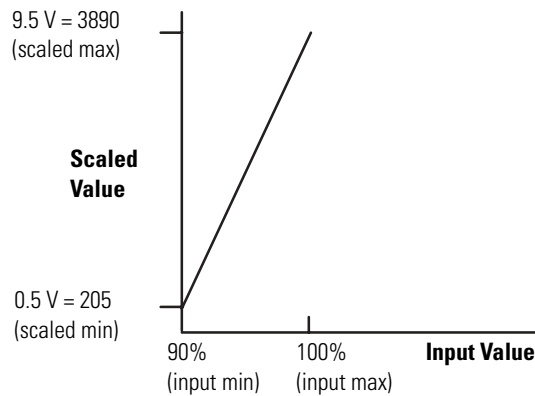

3. Now we compute the offset for the shifted linear relationship.

$$\begin{aligned} \text{Offset} &= \text{scaled min} - (\text{input min} \times \text{slope}) \\ &= 205 - [0 \times (368.5)] = \mathbf{205} \end{aligned}$$


The offset is 205, well below 32,767. The slope remains 3685/10 (> 3.2767), so you cannot use the SCL instruction for scaling.

$$\begin{aligned} \text{Slope} &= (\text{scaled range}) / (\text{input range}) = (3890 - 205) / 10 = 3685/10 \\ \text{Scaled value} &= (\text{input value} \times \text{slope}) + \text{offset} = [\text{input value} \times 3685 / 10] + 205 \end{aligned}$$

Ladder Logic

The following ladder logic uses standard math. It unlatches the mathematical overflow bit S2:5/0 before the end of the scan to prevent a processor fault. The module is located in slot 2, and the output device is wired to channel 0.

Scale Offset

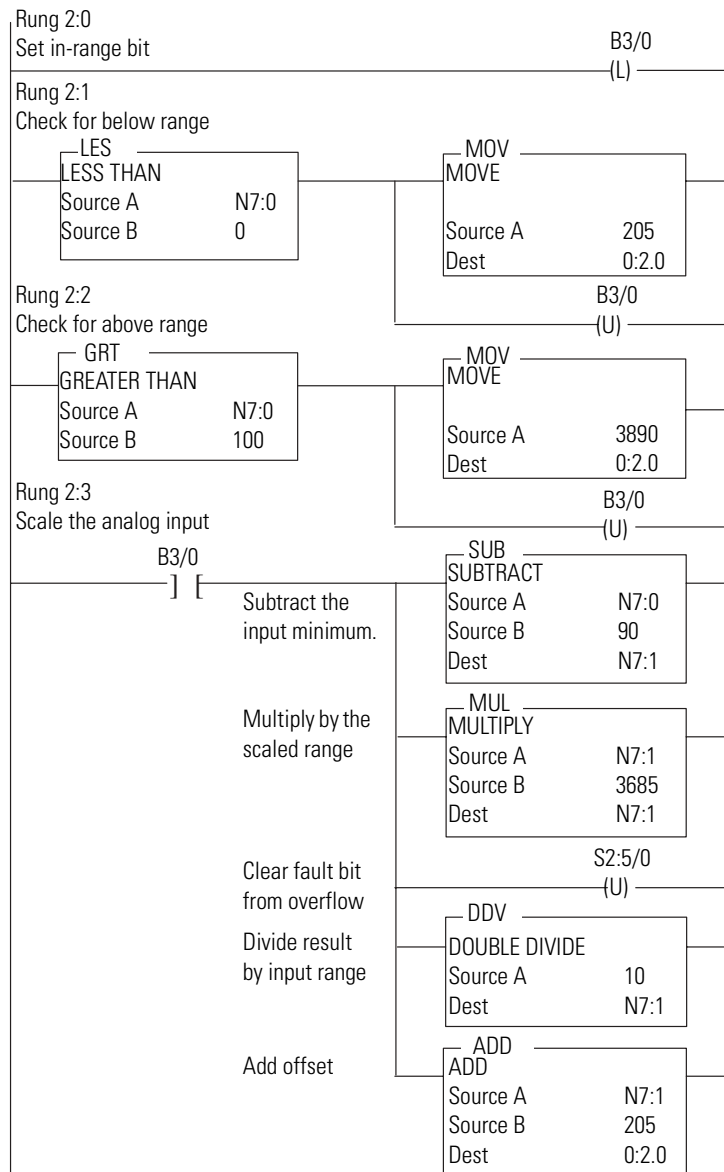


Range-check an Analog Input and Scale It for an Output

This example checks the range of an analog input and scales it for use as an output. An 1746-FIO4V module is placed in slot 1 of an SLC 500 system. A 4...20 mA signal representing 0...200 PSI from a pressure sensor is delivered to input channel 0. The input value is checked to ensure it remains within range. If the ladder logic detects an out-of-range condition, it sets a flag bit.

The input signal is then scaled and delivered as a 0...1.0V output signal to a panel pressure meter connected to output channel 0.

The graph displays the linear relationship between the analog input signal and the 0...1.0 output signal delivered to the panel pressure meter.

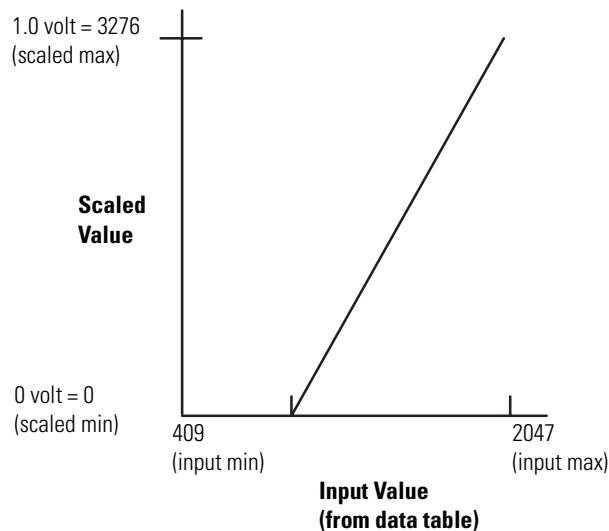

Calculate the Linear Relationship

Use the following equations to compute the linear relationship between the input values (from the input image table) and resulting scaled values for the 0...1V output:

Scaled value = (input value x slope) + offset

$$\text{Slope} = (\text{scaled max} - \text{scaled min}) / (\text{input max} - \text{input min})$$

$$(3276 - 0) / (2047 - 409) = 3276 / 1638 = 2.0$$

Since the slope is less than 3.2767, you can use the SCL instruction.

$$\text{Offset} = \text{scaled min} - (\text{input min} \times \text{slope})$$

$$0 - (409 \times 2) = -818$$

Scaled value = (input value x 2) - 818

Ladder Logic

We present two examples. The first runs on any SLC 500 processor. The second uses the scaling instruction available on SLC 5/02 (and later) processors.

In the first example, the analog input value is checked against the minimum and maximum input limits. B3:0/0 is the in-range flag bit.

If the input is out of range, the in-range flag bit is reset and the output is set to its minimum or maximum limit. If the input is in range, the output value is determined by scaling the input.


Follow these steps to scale an analog input for this example.

1. Multiply the input by the scaled range
Scale range = (scaled max – scaled min) = 3276 – 0 = 3276
2. Divide the 32 bit result by the input range
Input range = (input max – input min) = 2047 – 409 = 1638
3. Add the offset value (in this case negative) = –818
Move the final value to the analog output channel 0.

In this example, the multiply operation generates an overflow bit and minor error flag whenever the result exceeds 16 bits. Since the divide operation uses a 32-bit result in the math register, the overflow is no problem. The minor error flag has to be cleared before the end of the program scan to avoid a system error.

Refer to the ladder program on the next page.

Example Program for Any SLC Processor

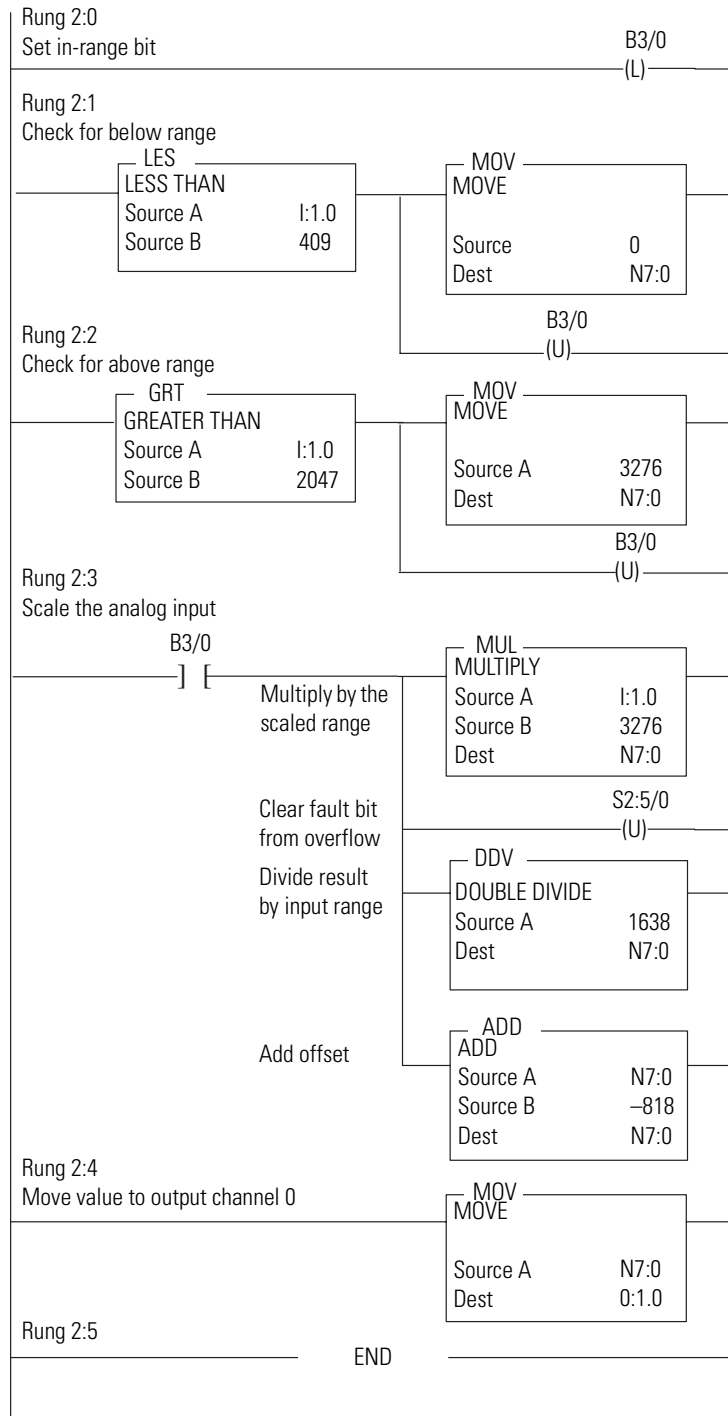


Using the scaling instruction (SCL) requires less ladder logic. The SCL instruction uses the same multiply, divide, and add algorithm but it does so with a single rate instead of using scaled range and input range values. The rate is determined by this formula.

$$\begin{aligned}
 \text{Rate} &= \text{slope} \times 10,000 \\
 &= (\text{scale range} / \text{input range}) \times 10,000 \\
 &= 3276 / 1638 \times 10,000 \\
 &= 2 \times 10,000 \\
 &= 20,000
 \end{aligned}$$

If the slope was greater than 3.2767, you could not use the SCL instruction because the rate would exceed 32,767, a value too large to handle.

Example Program for SLC 5/02 (or later) Processors

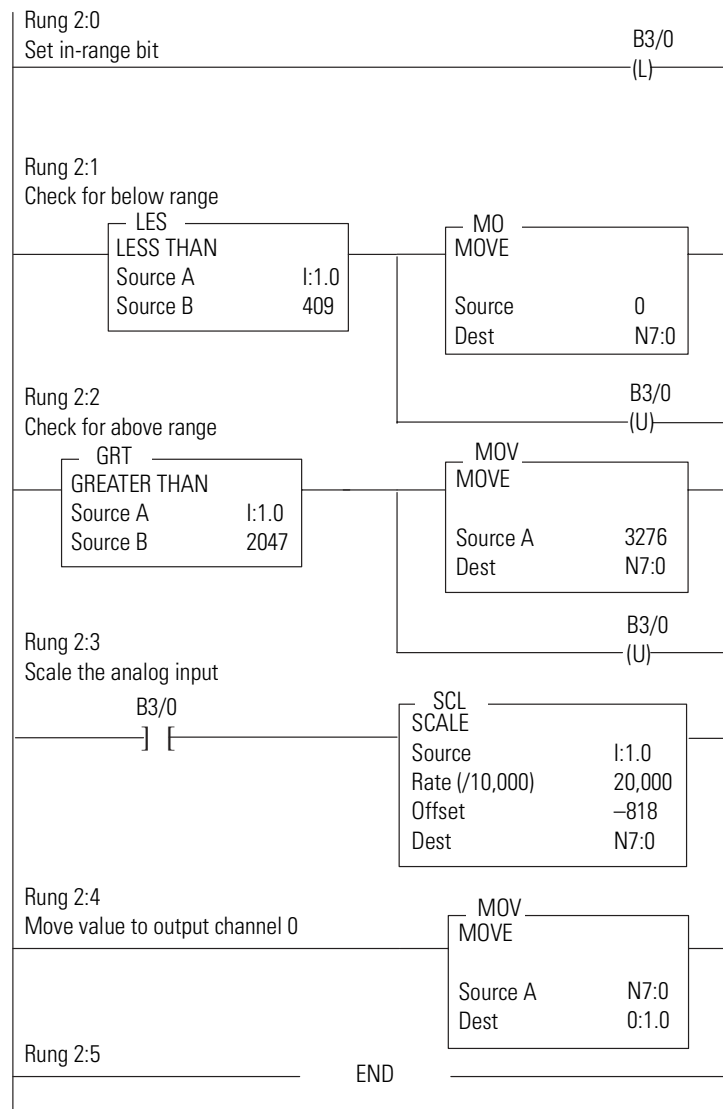

PID Control with Analog I/O Scaling

With the combination of PID and SCL (scale) instructions or PID and standard math instructions, you can write and display ladder logic in engineering units such as PSI or °C.

Follow these steps to display ladder logic in engineering units.

1. Scale the analog input PV by calculating the slope (or rate) of the analog input range.

For example, an input range such as 1...5V dc has a corresponding scaled range of 409...2047. You would scale the 409...2047 against 0...16383 for a slope of 10 (SCL rate of 100,000).

IMPORTANT

You cannot use the SCL instruction for scaling inputs if input rates (slope x 10,000) are too large (exceed 32,767). You must use standard math instructions instead.

2. Scale the analog output CV by calculating the slope (or rate) of the analog output range.

For example, an output range such as 4...20 mA has a corresponding decimal (scaled) range of 6242...31,208. You would scale the 6242...31,208 against 0...16,383.

For this output range	Compute the slope as follows	Compute offset as follows
4...20 mA	$\frac{\text{scaled max} - \text{scaled min}}{\text{input max} - \text{input min}}$	scaled min - [input min x slope]
	$\frac{31208 - 6242}{16383 - 0} = \frac{24966}{16383} = 1.5238$	= 6242 - [0 x 1.5238] = 6242

Here are some useful rate and offset parameters for the SCL instruction when scaling analog output ranges.

SCL Parameter	0...20 mA	4...20 mA	0...5V dc	1...5V dc	0...10V dc
Rate (slope x 10,000)	19,049	15,239	10,000	8,000	19,999
Offset	0	6242	0	3277	0

3. Enter PID parameters in engineering units into the PID instruction.


For example, if the 4...20 mA analog input range represents 0...300 PSI, enter 0 as the minimum (S_{min}) and 300 as the maximum (S_{max}). You can also enter setpoints and deadband in engineering units. The data monitor screen for PID displays its parameters in the same engineering units.

Ladder Logic


We present two examples of PID control logic with analog I/O scaling for use on an SLC 5/02 (or later) processor.

- Scaled voltage input and output, 0...10V dc
- Scaled current input and output, 4...20 mA


Example Program for SLC 5/02 (or later) Processors (scaled voltage input and output)

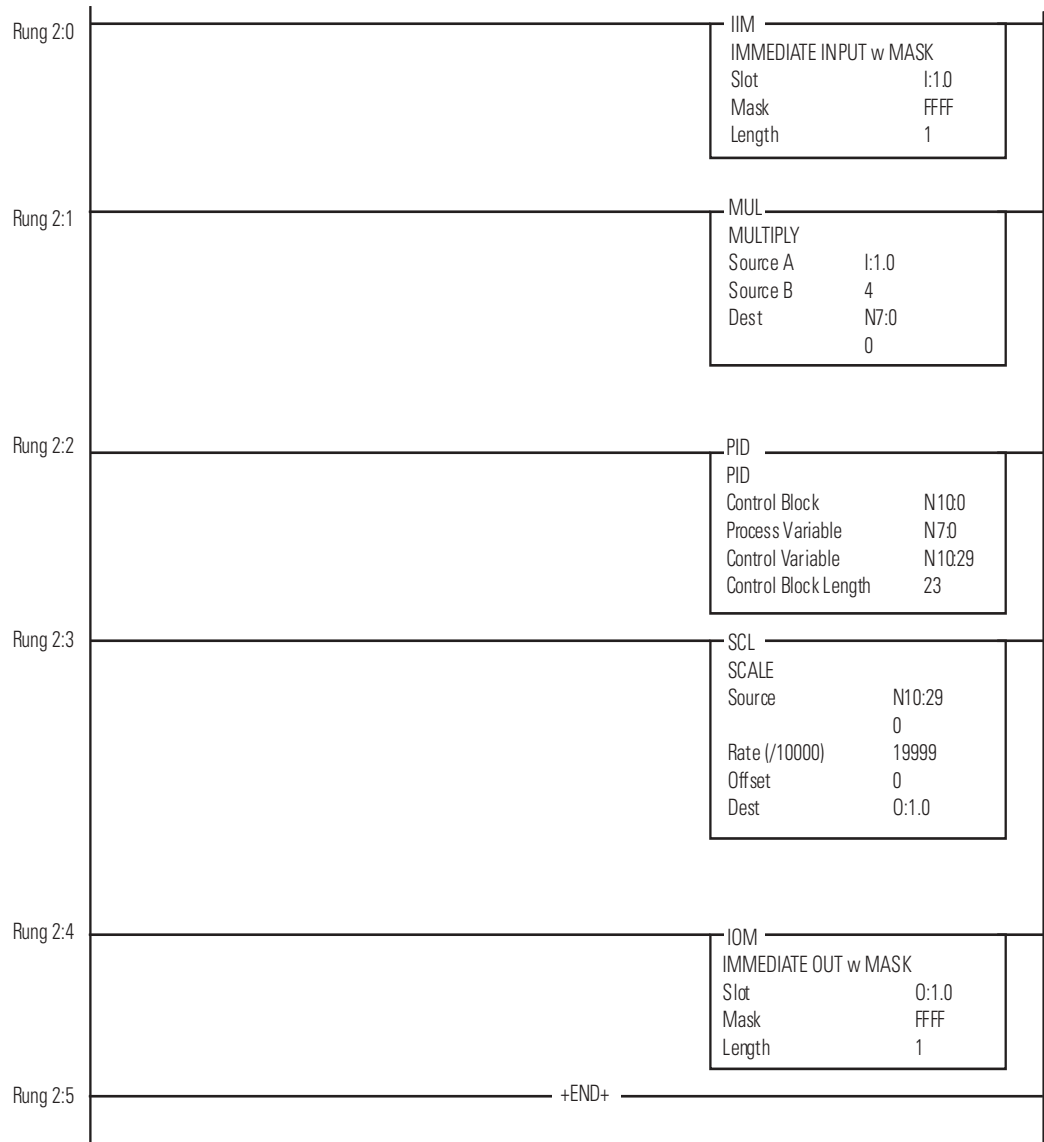

Example Program for SLC 5/02 (or later) Processors (scaled current input and output)

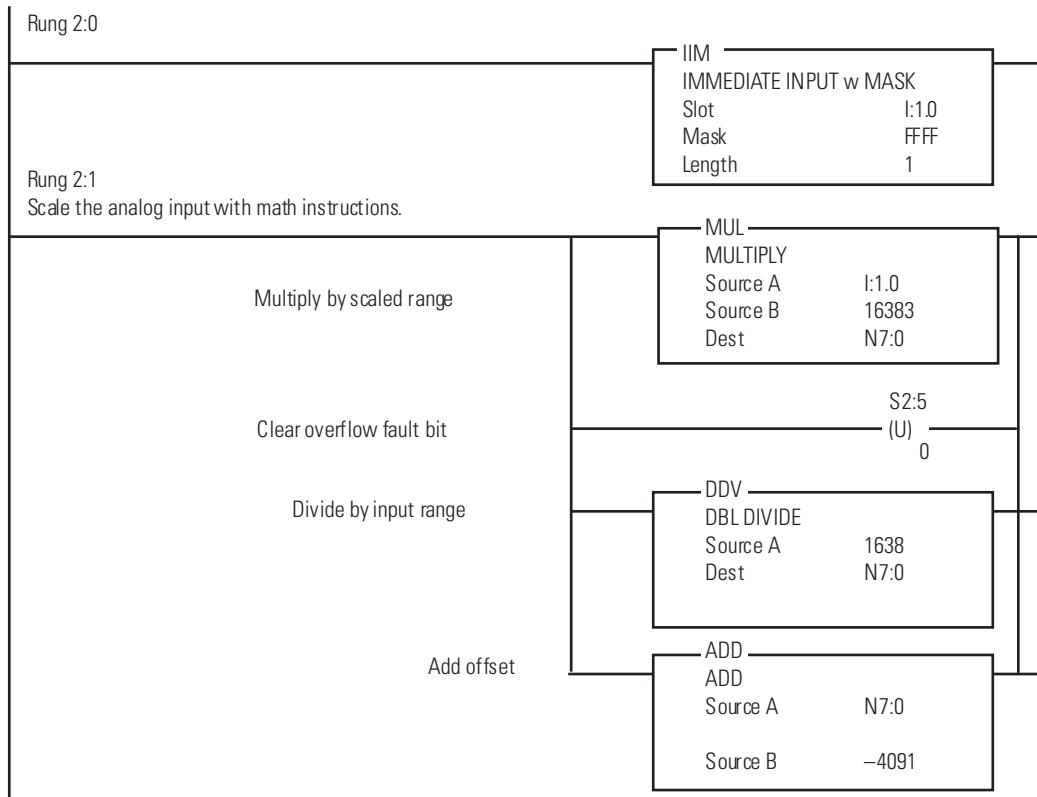

Brake Monitor Example Program for SLC 5/02 (or later) Processors

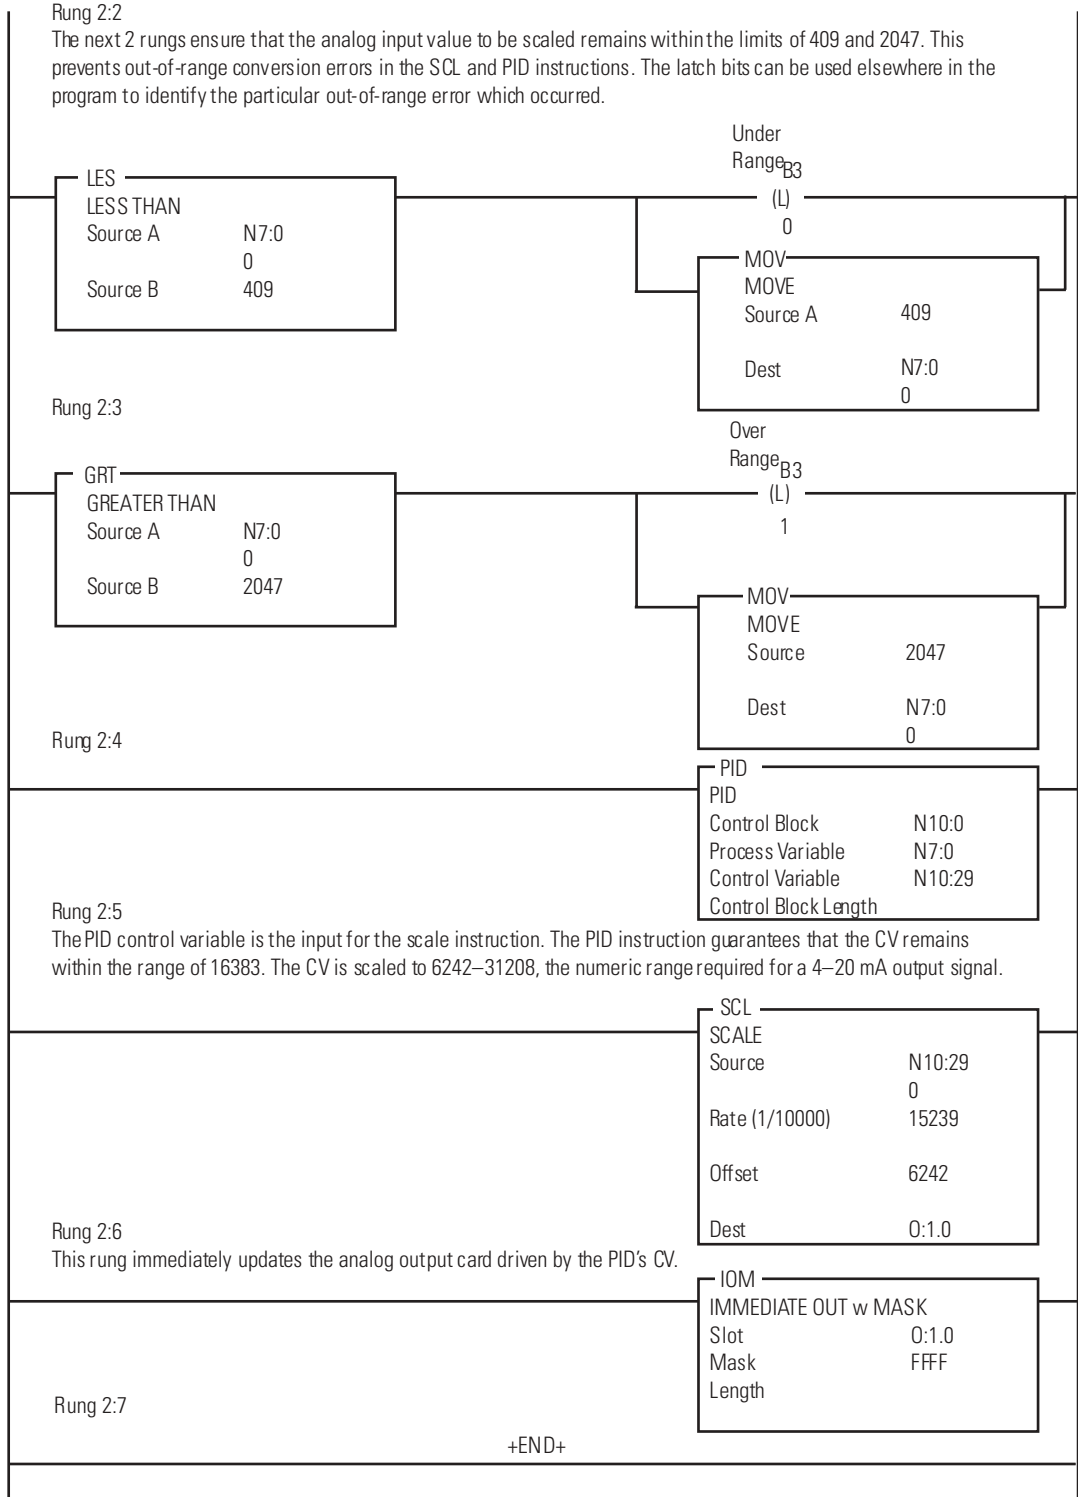

Calibrate the Module

This chapter helps you calibrate the module's analog input channels to increase the expected accuracy from ± 21 LSB of error to ± 6 LSB. The combination of calibration program and procedure is designed to reduce offset and gain errors by:

- scaling the values read during calibration.
- applying them during runtime.

We provide example computations and ladder logic for your reference.

Calibration Tradeoffs

Operating a calibrated module requires the addition of the calibration program for each calibrated input channel. Scanning the calibration program increases the program scan time during runtime, slowing the module's response. If the overall channel error of $\pm 0.510\%$ of full scale at 25 °C (77 °F) is acceptable to your application, you need not calibrate. If you require a calibrated input channel, consider recalibrating every time you change the input sensor and/or the analog module.

Calibrate an Analog Input Channel

We provide an example calibration program and a calibration procedure to show you how to calibrate an analog input channel.

This example assumes an analog output of 4...20 mA from a transducer. The corresponding decimal code that the module would write into the processor's input image table would be 409 at 4 mA and 2047 at 20 mA if the overall error of an input channel were zero. However, the overall error of $\pm 0.510\%$ at 20 mA equates to ± 21 LSB of error, or a code range of 2026...2068. In other words, the value that the module transfers to the data table for a full scale sensor signal of 20 mA could be any value within the range of 2026...2068. Calibration should reduce the overall error to less than ± 6 LSB, or a code range of 2041...2053 for the error of the 20 mA signal.

Code Ranges

With this full-scale sensor output	For an uncalibrated channel, the corresponding output would have this range of error	For a calibrated channel, the corresponding output would have this range of error
20 mA >>	2068 >>> 2047 >>>> 2026	2053 >>> 2047 2041

Example Calibration Program

Complete these tasks to maintain calibrated inputs for each channel.

- Add a calibration program for each channel to your application logic.
- Calibrate each channel.
- Enable the Convert Enable rung (rung 2:4) during runtime.

The calibration program requires three external inputs to calibrate each channel.

- Lo captures the low calibration value (calibration procedure, step 3).
- Hi captures the high calibration value (calibration procedure, step 4).
- Cal scales the Hi and Lo values to provide the slope and offset (step 5).

These addresses are used in the example program.
(Each channel requires its own program and separate addresses.)

Example Program Addresses

Bit or Value	Address
Cal_Lo	I:1.0/0 and N10:0/0 (You set these bits in step 3.)
Cal_Hi	I:1.0/1 and N10:0/1 (You set these bits in step 4.)
Calibrate	I:1.0/2 and N10:0/2 (You set these bits in step 5.)
Convert Enable	N10:10/4 (Runtime enable)
Analog_In	I:2.0
Lo_Value	N10:1
Hi_Value	N10:2
Scale_Hi	N10:3
Scale_Lo	N10:4
Scale_Span	N10:7
Span	N10:9
Slope_x10K	N10:18
Offset	N10:21
Analog Scale	N10:22


Compute values required for the calibration program as follows:


Scaled value = (input value x slope) + offset


$$\begin{aligned} \text{Slope} &= (\text{scaled max.} - \text{scaled min.}) / (\text{input max.} - \text{input min.}) \\ &= (2047 - 409) / (2055 - 400)^1 = 1638 / 1655 = \mathbf{.9897} \end{aligned}$$

¹ The values of 2055 and 400 are from the calibration procedure steps 3 and 4, respectively.

$$\begin{aligned} \text{Offset} &= \text{scaled min.} - (\text{input min.} \times \text{slope}) \\ &= 409 - (400 \times .9897) = 409 - 395.88 = 13.12 \end{aligned}$$

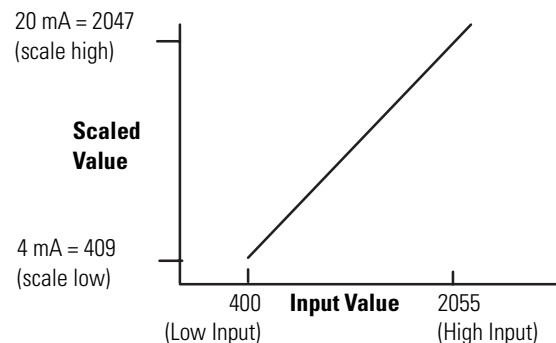

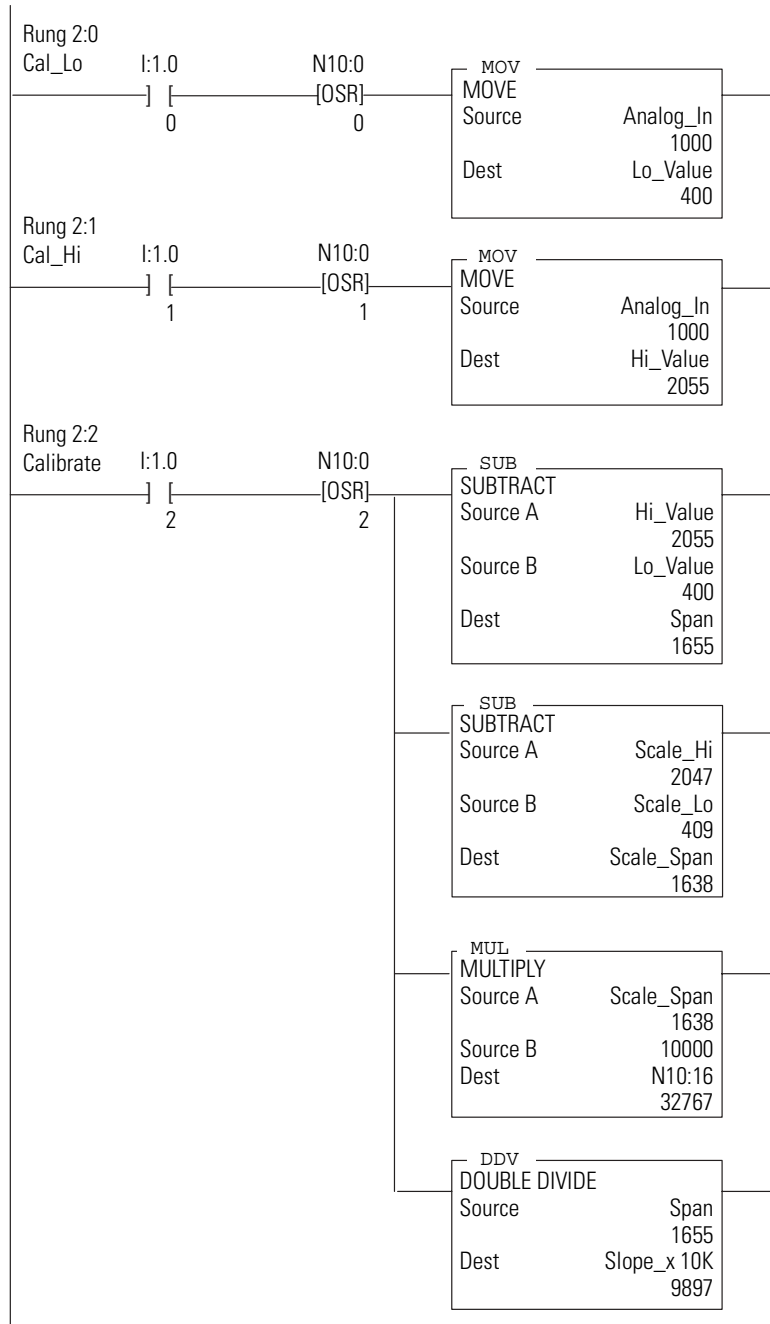

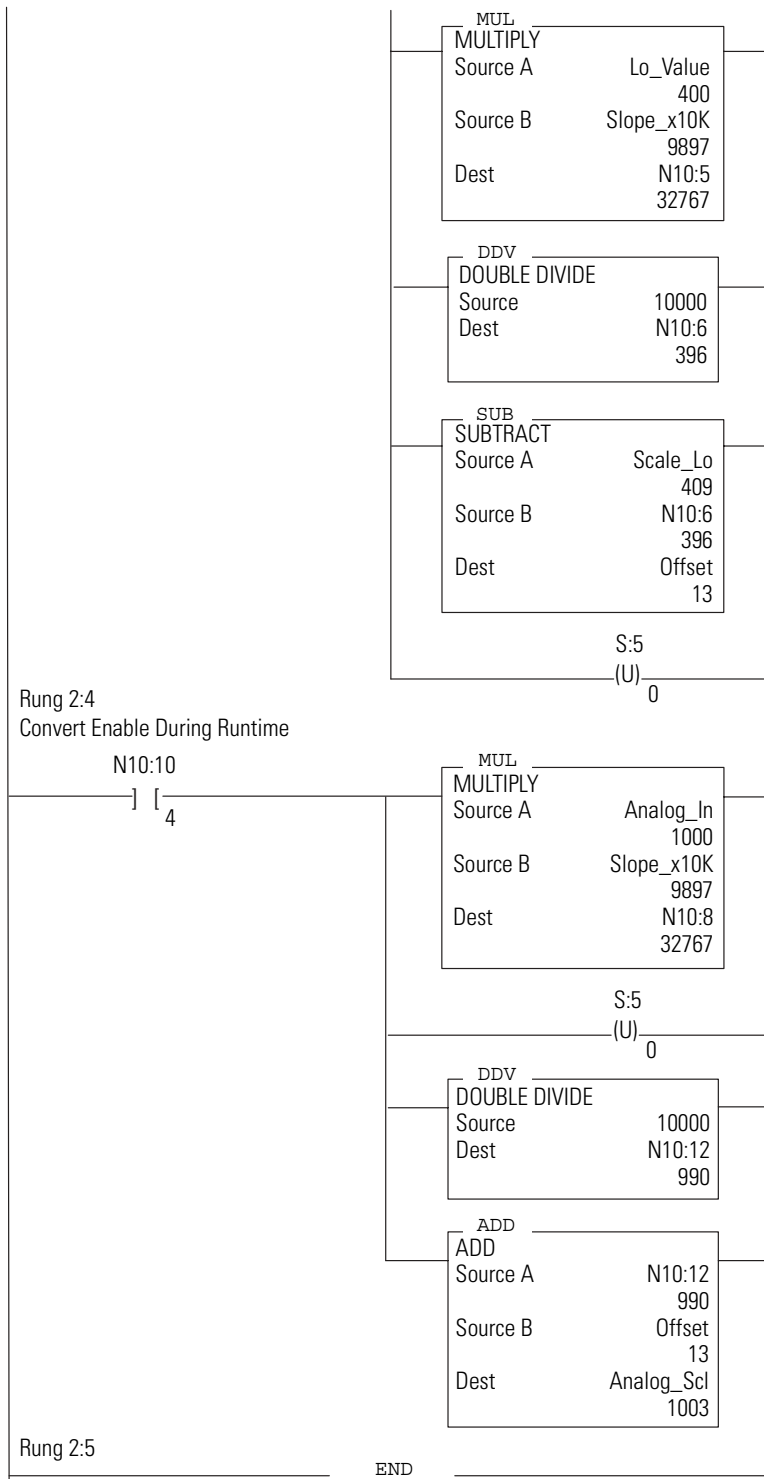

Calibration Procedure

Recalibrate every six months, or as necessary.

1. Let the module warm up under power for at least 20 minutes at ambient operating temperature.
2. Determine the scaled high and low values you wish to use in your application.

In this example, scaled high is 2047 (20 mA) and scaled low is 409 (4 mA).

3. Capture the Lo calibration value.
 - a. Place the input sensor (or input source) at the low (4 mA) position.
 - b. Set the Cal Lo bit (I:1.0/0) and OSR bit (N10:0/0).

Your low value must be within the analog input's conversion range. For this example, it is 400.
4. Capture the Hi calibration value.
 - a. Place the input sensor (or input source) at the high (20 mA) position.
 - b. Set the Cal Hi bit (I:1.0/1) and OSR bit (N10:0/1).

Your high value must be within the analog input's conversion range. For this example, it is 2055.
5. Set the Calibrate bit (I:1.0/2) and OSR bit (N10:0/2) to energize the calibration input.

This causes the SCL instruction to compute and store the slope and offset values used to perform the error correction to the analog input.

IMPORTANT

To apply calibration values to the input channel during normal operation, enable rung 2.4 during runtime.

Test Module Operation

This chapter helps you test the operation of the module's I/O channels.

Test the SLC 500 System

Testing the SLC 500 system is beyond the scope of this manual. We mention it here only because you should test and debug at the system level before testing and debugging the module in the system.

If your module is installed in the expansion rack of a fixed system, test your SLC 500 system using procedures described in the Fixed Hardware Installation & Operation Manual, publication 1747-6.21, before testing the analog module.

If your analog module is installed in a modular system, test your SLC 500 system using procedures described in the SLC 500 Modular Hardware Style User Manual, publication 1747-UM011, before testing the analog module.

Test the Module

Once you have tested your SLC 500 system, follow this procedure to test the module at start up. We describe each of the steps in detail.

1. Inspect module switches and wiring.
2. Disconnect analog process control devices.
3. Apply power to the I/O rack.
4. Test analog inputs.
5. Test analog outputs.

Inspect Module Switches and Wiring

Inspect the module as follows before installing it.

1. Set the input configuration switches 1 and 2 correctly.
2. Check that wiring connections are OK and no wires are missing or broken.
3. Tighten terminal connections to secure the wires.

ATTENTION

Care should be taken to avoid connecting a voltage source to a channel configured for a current input. Improper module operation or damage to the module can occur.

4. Ground the cable shields properly.

ATTENTION

Do not attempt to ground the cable at the module's terminal block. It does not connect to earth ground. Ground the cable at one end only, as described in chapter 2.

5. Securely connect the module's terminal block.
6. Install the module in its addressed I/O rack slot.

Disconnect Analog Process Control Devices

During the following test procedures, you need to operate the processor in Run mode. Make sure that analog process control devices are inoperative as a safety precaution. These devices include the following:

- proportional valves.
- proportional drives.
- servo amplifiers.
- other analog signal amplifiers that drive analog output devices.

Leave the module connected to the output device to serve as the output load where possible, but inhibit its affect on controlling the process. Substitute a passive load for the active device as an alternative.

ATTENTION

Process operation during system checkout can be hazardous to personnel. During checkout procedures, disconnect, inhibit, or substitute a passive load for all devices which, when energized, might cause the process to operate.

Apply Power to the I/O Rack

Apply power to the fixed or modular system. The module's LED indicator should be illuminated (red), indicating that the module is receiving power. If not, troubleshoot the non-illuminated LED indicator. Check the following:

- The SLC 500 system is not receiving power from its power supply. For an SLC processor in the fixed system, check the processor's POWER LED indicator. For the modular system, check the power supply LED indicator.

If the LED indicator is not illuminated, refer to the Installation & Operation Manual of the system.

- System power is not being received by the remainder of the SLC 500 system. Test this by attempting to go online with the programming device.
- The module's slot in the I/O rack is not operational. Remove power from the SLC 500 system, move the module to another slot, and restore power. Replace the I/O rack if power distribution is faulty.
- The module is defective.

Test Analog Inputs

Before testing the module's input channels, the SLC 500 system must be installed and tested according to the SLC 500 Modular Hardware Style User Manual, publication 1747-UM011.

The processor must be connected to a programming device, properly configured, and must have no rungs in its ladder program. The module's LED indicator must also be illuminated.

ATTENTION

Do not attempt to test the module's input channels unless its process control output devices have been disconnected, inhibited, or replaced by a passive load.

If your input sensors can be manually varied over their normal operating range, use them to test the input channels. If not, use a replacement voltage or current source after disconnecting the sensor.

IMPORTANT

If a current source is not available to test a current input channel, carefully apply a substitute input voltage instead. Determine the substitute input voltage using this formula.

$$\text{Voltage Input (V)} = \text{Current Input (mA)} \times 0.25$$

For example, substitute input voltages for 1 mA, 5 mA, and 20 mA inputs would be 0.25, 1.25, and 5.0V, respectively. Do not exceed 5V.

In normal operation, a voltage source should not be connected to an analog input channel in the current mode.

1. Determine the limits of the sensor's signal range for the channel.

For example, if the sensor has an output range of 1...5 mA, the lower limit is 1 mA and the upper limit is 5 mA.

2. Compute the decimal value that should appear in the processor's input image table for the sensor's lower and upper signal limits at the input channel.

For example, limits of 1 mA and 5 mA would have typical decimal values of 407 and 2047, respectively. If necessary, refer to the section, Converting Analog Input Data, in chapter 4.

3. With the programming device on-line, select the processor's Test- Continuous scan mode.

This provides a safer testing mode because outputs are not energized.

4. Display the data in File 2 (Input Image table).
5. Select the Data Monitor mode of your programming device when viewing I/O point I:1.0.
6. Change the radix of the display to decimal.
7. If the sensor is connected, set it to its lower limit.

If the sensor was disconnected from the module's input channel, attach the replacement voltage or current source and set the source to the lower limit.

8. Locate the channel's signal in the input image table.

The signal should be approximately equal to the lower limit computed in step B.

The value of the input image word is affected by the accuracy of the module and sensor.

Any error should be within the sum of their tolerances.

9. If the sensor is connected, set it to the upper limit.

If the sensor was disconnected from the module's input channel, set the replacement voltage or current source to the upper limit.

10. Repeat step 7, this time for the upper limit.

11. Repeat steps 1...10 for the other analog input channel.

If either of the analog input channels does not pass this start-up procedure, check for the following potential causes.

- The analog sensor (voltage or current source) is not operating properly.
- The processor is not in the Test/Continuous scan mode.
- The terminal block is not secured on the module.
- The terminal block is not wired properly or wires are broken.

Test Analog Outputs

Before testing the module's output channels, the SLC 500 system must be installed and tested according to the SLC 500 Modular Hardware Style User Manual, publication 1747-UM011. The processor must be connected to a programming device, properly configured, and must have no rungs in its ladder program. The module's LED indicator must also be illuminated.

ATTENTION



Do not attempt to test the module's output channels unless its process control output devices have been disconnected, inhibited, or replaced by a passive load.

If the output device controls a potentially dangerous operation or a prime mover, use a voltmeter to test voltage outputs or an ammeter to test current outputs. Note that these meters have some inherent error of their own.

If using a meter, disconnect the output device and/or use a substitute load.

1. Determine the lower and upper limits of the module's output channel.


For example, if connected to a signal amplifier with an input range of 1...5 volts, the signal limits are 1 volt (lower) and 5 volts (upper).

2. Compute the decimal value that should appear in the processor's output image table for the channel's lower and upper signal limits.

For example, limits of 1 and 5 volts would have decimal values of 3277 and 16384, respectively. If you need help, refer to the section, Converting Analog Output Data, in chapter 4.

3. With the programming device on-line, select Program mode.

4. Create and save the test rung shown below.

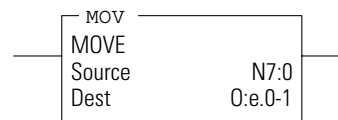

e is the module's I/O rack slot number

0-1 is the number of the module's output channel being tested

5. Download the test rung to the processor and select RUN mode.
6. Display the data in address N7:0.
7. Enter the lower limit in N7:0.

For example, if the lower limit is 1 volt, enter 3277 into N7:0.

8. Check that the output device is connected to the output channel and that the device assumes its lower limit condition.

If the output device is disconnected, read the replacement meter. Do not overlook module and meter errors.

9. Enter the upper limit in N7:0.

For example, if the upper limit is 5 volts, enter 16384 into N7:0.

10. Repeat step 7, this time for the upper limit.

11. Repeat steps 1...10 for the other output channel.

If either output channel does not pass this startup procedure, check that the:

- actuator or test meter is operating properly.
- processor is in RUN mode.
- terminal block is secured to the module.
- terminal block is wired properly or wires are not broken.

Maintenance and Safety

This chapter provides preventive maintenance information and safety considerations when troubleshooting your SLC 500 system.

Preventive Maintenance

The printed circuit boards of the analog modules must be protected from dirt, oil, moisture, and other airborne contaminants. To protect these boards, the SLC 500 system must be installed in an enclosure suitable for the environment. The interior of the enclosure should be kept clean and the enclosure door should be kept closed whenever possible.

Regularly inspect your terminal connections for tightness. Loose connections may cause improper functioning of the SLC 500 system or damage the components of the system.

ATTENTION

To ensure personal safety and to guard against damaging equipment, inspect connections with incoming power turned OFF.

The National Fire Protection Association (NFPA) recommends maintenance procedures for electrical equipment. Refer to article 70B of the NFPA for general requirements regarding safety related work practices.

Safety Considerations When Troubleshooting

Safety considerations are an important element of proper troubleshooting procedures. Actively thinking about the safety of yourself and others, as well as the condition of your equipment, is of primary importance.

Refer to the Installation and Operation Manual for Fixed Hardware Style Programmable Controllers, publication 1747-6.21, or SLC 500 Module Hardware Style User Manual, publication 1747-UM011, for additional information on troubleshooting.

Follow these suggestions when troubleshooting your SLC 500 system.

Indicator Lights – When the red LED indicator on the analog module is illuminated it indicates that 24V dc power is applied to the module.

Activating Devices When Troubleshooting – When troubleshooting, never reach into the machine to actuate a device. Unexpected machine motion could occur. Use a wooden stick.

Stand Clear of Machine – When troubleshooting any SLC 500 system problem, have all personnel remain clear of the machine. The problem could be intermittent, and sudden unexpected machine motion could occur. Have someone ready to operate an emergency stop switch in case it becomes necessary to shut off power to the machine.

When troubleshooting, pay careful attention to this general warning.

WARNING

Never reach into a machine to actuate a switch since unexpected machine motion can occur and cause injury.

Remove all electrical power at the main power disconnect switch before checking electrical connections or inputs/outputs that cause process actuation or machine motion.

Program Alteration – There are several causes of alteration to the user program, including extreme environmental conditions, Electromagnetic Interference (EMI), improper grounding, improper wiring, and unauthorized tampering. If you suspect the program has been altered, check it against a previously saved program on an EEPROM or UVROM memory module.

Safety Circuits – Circuits installed on the machine for safety reasons, like over-travel limit switches, stop pushbuttons, and interlocks, should always be hard-wired to the master control relay. These devices must be wired in series so that when any one device opens, the master control relay is de-energized thereby removing power to the machine. Never alter these circuits to defeat their function. Serious injury or machine damage could result.

Module Specifications

General Description

The 1746-FIO4I and 1746-FIO4V fast analog I/O modules provide two input and two output channels. Input channels are the same for both types of modules: you select either current or voltage operation for each channel. The 1746-FIO4I module contains two current-output channels, while the 1746-FIO4V module contains two voltage-output channels.

Specifications

Specifications for the fast analog I/O modules include the following:

- general specifications.
- general input specifications.
- voltage input specifications.
- current-loop input specifications.
- current output specifications for the 1746-FIO4I.
- voltage output specifications for the 1746-FIO4V.

General Specifications

Catalog 1746-	Input Channels per Module	Output Channels per Module	Backplane Current		ID Code
			5 V	24 V	
FIO4I	Two differential, voltage or current, selectable per channel	Two current outputs, not individually isolated	55 mA	150 mA	3224
FIO4V	Same as FIO4I	Two voltage outputs, not individually isolated	55 mA	120 mA	3218

Electrical Specifications - 1746-FIO4I, 1746-FIO4V

Attribute	Value
Cable	Shielded, Belden #8761 (recommended)
Wire Size	2.5 mm ² (14 AWG) max
Terminal Block	Removable
Installation	Single slot in the 1746 I/O Rack
Calibration	Every six months or as necessary

Electrical Specifications - 1746-FIO4I, 1746-FIO4V

Attribute	Value
Noise Immunity	NEMA standard ICS 2-230
Temperature, Operating	0... 60 °C (32...140 °F)
Temperature, Storage	-40...85 °C (-40...185 °F)
Relative Humidity	5 ... 95% (noncondensing)

General Input Specifications - 1746-FIO4I, 1746-FIO4V

Attribute	Value
Converter Resolution	12 bits
Converter Type	Successive approximation
Track and Hold Time to Acquire the Analog Signal Before Conversion	1.5 µs (nom)
Signal Convert from Hold	6.0 µs (nom)
Conversion Time (sum of above two specs)	7.5 µs every 512 µs (nom)
Non-linearity	±0.073% of full scale (max)
Location of LSB in I/O image word	0000 0000 0000 0001
Image Format (HEX)	0FFF
Common Mode Voltage Range	0 ... 20V (max)
Common Mode Rejection at 60 Hz	50 dB (min with 1 kΩ imbalance)
Channel Bandwidth	7.0 kHz (min @ 3 dB point)
Module Throughput	1.10 ms (max ⁽¹⁾) 512 µs (typical)
Step Response (5...95%)	100 µs
Impedance to ANL COM	500 kΩ
Impedance Channel-to-channel	1 MΩ
Field Wiring to Backplane Isolation	500V dc

⁽¹⁾ Worst case throughput occurs when the module just misses seeing an event occur.

Voltage Input Specifications - 1746-FIO4I, 1746-FIO4V

Attribute	Value
Input Operating Range	0... 10V dc (max)
Input Impedance	1 MΩ (nom)
Resolution	2.4414 mV per LSB (nom)
Voltage Input Coding (0... 10V dc – 1 LSB)	0... 4095 counts

Voltage Input Specifications - 1746-FI04I, 1746-FI04V

Attribute	Value
Overall Accuracy at 25 °C (77 °F)	±0.440% of full scale
Overall Accuracy at 60 °C (140 °F)	±0.750% of full scale
Overall Accuracy Drift	±88 ppm/°C (max)
Gain Error at 25 °C (77 °F)	±0.323% of full scale
Gain Error at 0...60 °C (32...140 °F)	±0.530% of full scale
Gain Error Drift	±79 ppm/°C (max)
Offset Error at 0...60 °C (32...140 °F)	±4 LSB (max)
Offset Error at 25 °C (77 °F)	±2 LSB (typical)
Offset Error Drift	±0.14 LSB/°C (max ⁽¹⁾)
Overvoltage Protection (IN+ to IN-)	220V dc or ac RMS, continuously

⁽¹⁾ Computed by box method: 2 [max offset error] / 60 °C

Current-loop Input Specifications - 1746-FI04I, 1746-FI04V

Description	Specification
Input Operating Range	0...20 mA (nom) 0...30 mA (max)
Input Voltage	±7.5V dc or ac RMS (max)
Current Input Coding Range (0...20 mA)	0...2047 counts
Input Impedance	250 Ω (nom)
Resolution	9.7656 µA per bit
Overall Accuracy at 25 °C (77 °F)	±0.510% of full scale
Overall Accuracy at 60 °C (140 °F)	±0.850% of full scale
Overall Accuracy Drift	±98 ppm/°C of full scale (max)
Gain Error at 25 °C (77 °F)	±0.400% of full scale
Gain Error at 0...60 °C (32...140 °F)	±0.707% of full scale
Gain Error Drift	±89 ppm/°C (max)
Offset Error at 0...60 °C (32...140 °F)	±4 LSB
Offset Error at 25 °C (77 °F)	±2 LSB (typical)
Offset Error Drift	±0.14 LSB/°C (max ⁽¹⁾)
Overvoltage Protection	7.5V ac RMS (max)

⁽¹⁾ Computed by box method: 2 [max offset error] / 60 °C

Current Output Specifications for 1746-FIO4I

Attribute	Value
Converter Resolution	14 bit
Location of LSB in I/O Image Word	0000 0000 0000 01XX
Non-linearity	0.05% of full scale (max)
Conversion Method	R-2R ladder
Step Response	2.5 ms (at 95%)
Load Range	0 ... 500 Ω
Load Reactance	100 μ H (max)
Current Output Coding (0...+21 mA – 1 LSB)	0 ... 32,764
Output Range	0 ... 20 mA – 1 LSB (normal)
Overrange Capability	5% (0...21 mA – 1 LSB)
Resolution	2.56348 mA per LSB
Full Scale	21 mA
Overall Accuracy at +25 °C (77 °F)	\pm 0.298% of full scale
Overall Accuracy at 0...60 °C (32...140 °F)	\pm 0.541% of full scale
Overall Accuracy Drift	\pm 70 ppm/°C of full scale (max)
Gain Error at 25 °C (77 °F)	\pm 0.298% of full scale
Gain Error at 0...60 °C (32...140 °F)	\pm 0.516% of full scale
Gain Error Drift	\pm 62 ppm/°C (max)
Offset Error at 25 °C (77 °F)	\pm 10 LSB (typical)
Offset Error at 0...60 °C (32...140 °F)	\pm 12 LSB
Offset Error Drift	\pm 0.06 LSB/°C (max)

Voltage Output Specifications for 1746-FIO4V

Attribute	Value
Converter Resolution	14 bit
Location of LSB in I/O Image Word	0000 0000 0000 01XX
Non-linearity	0.05% of full scale
Conversion Method	R–2R ladder
Step Response (to 95%)	2.5 ms (normal)
Load Range	1 k...∞Ω
Load Current	10 mA (max)
Load Reactance	1 μF (max)
Voltage Output Coding (–10...10V dc – 1 LSB)	–32,768 ... +32,764
Output Range	–10 ... 10V – 1 LSB (normal)
Resolution	1.22070 mV per LSB
Full Scale	10V dc
Overall Accuracy at 25 °C (77 °F)	±0.208% of full scale
Overall Accuracy at 0...60 °C (32...140 °F)	±0.384% of full scale
Overall Accuracy Drift	±54 ppm/°C of full scale (max)
Gain Error at 25 °C (77 °F)	±0.208% of full scale
Gain Error at 0...60 °C (32...140 °F)	±0.374% of full scale
Gain Error Drift	±47 ppm/°C (max)
Offset Error at 25 °C (77 °F)	±9 LSB (typical)
Offset Error at 0...60 °C (32...140 °F)	±11 LSB
Offset Error Drift	±0.05 LSB/°C (max)

2's-complement Binary Numbers

Use 2's-complement Binary Numbers

The SLC 500 processor stores data as 16-bit binary numbers. The processor uses 2's-complement binary format when making mathematical computations and when storing analog values in the I/O image table.

As indicated in the figure on next page, the equivalent decimal value of the 2's-complement binary number is the sum of corresponding position values. The corresponding position value is equal to 2 raised to the power designated by the position, beginning at the right with 2^0 and ending at the left with 2^{15} . The bit value in each position can be 0 or 1, where 0 excludes the corresponding position value from the sum and 1 includes it.

Positive Decimal Values


The far left position is always 0 for positive values. Binary notation and 2's-complement binary notation are identical for positive values. This format limits the maximum positive value to 32767 when all positions are 1 except for the far left position (see figure below). Study these examples.

$$0000\ 1001\ 0000\ 1110 = 2^{11} + 2^8 + 2^3 + 2^2 + 2^1$$

$$= 2048 + 256 + 8 + 4 + 2 = 2318$$

$$0000\ 0011\ 0010\ 1000 = 2^9 + 2^8 + 2^5 + 2^3$$


$$= 512 + 256 + 32 + 8 = 808$$

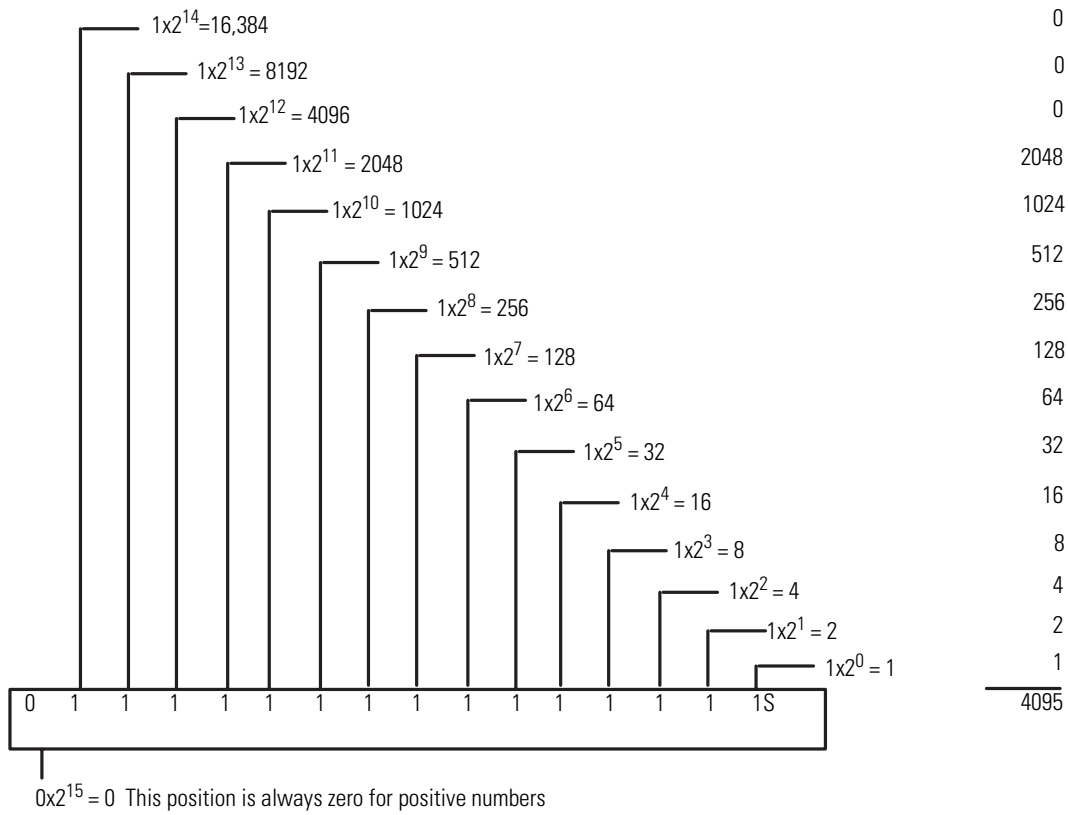

Negative Decimal Values

The far left position is always 1 for negative values. The equivalent decimal value of a negative 2's-complement binary number is obtained by subtracting 32768 from the sum of the other position values. In the figure below, all positions are 1 and the value is $32767 - 32768 = -1$. Study this example:

$$\begin{aligned}
 &1111\ 1000\ 0010\ 0011 = \\
 &(2^{14} + 2^{13} + 2^{12} + 2^{11} + 2^5 + 2^1 + 2^0) - 2^{15} = \\
 &(16384 + 8192 + 4096 + 2048 + 32 + 2 + 1) - 32768 = \\
 &30755 - 32768 = -2013
 \end{aligned}$$

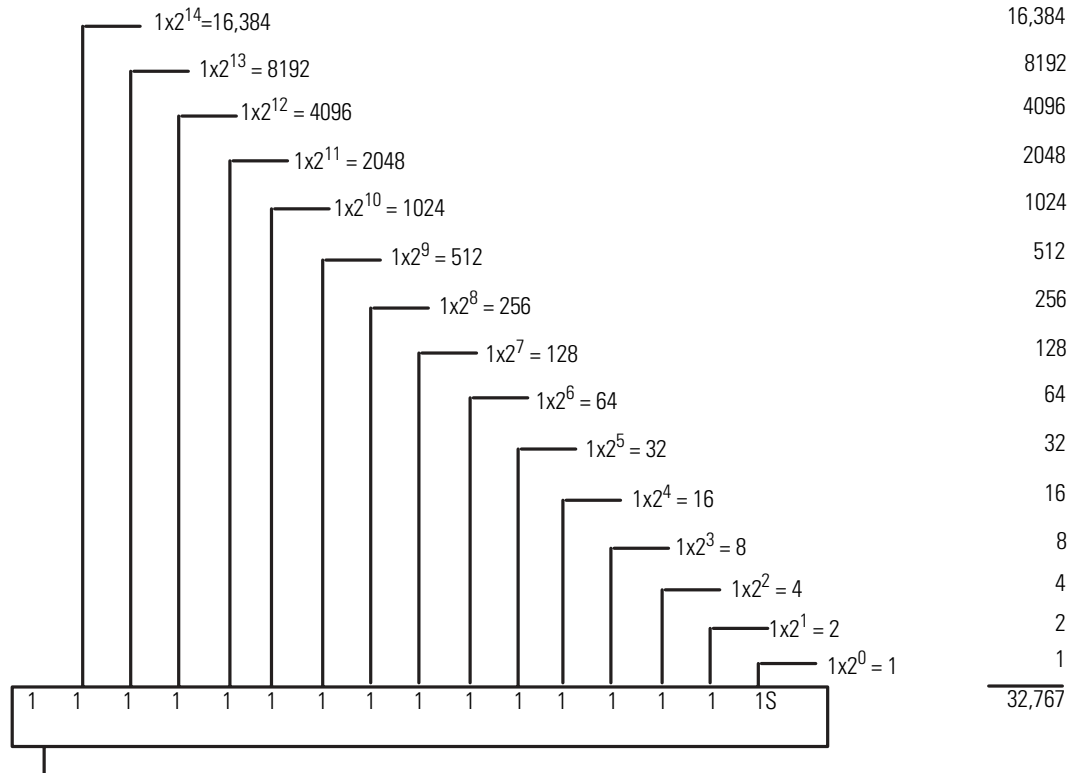


This position is always 1 for negative numbers ($1 \times 2^{15} = 32,768$)


Module Input and Output Circuits

These wiring diagrams show the input circuit, voltage output, and current output for the fast analog modules.


Input Circuit for 1746-FI04V and 1746-FI04I Modules

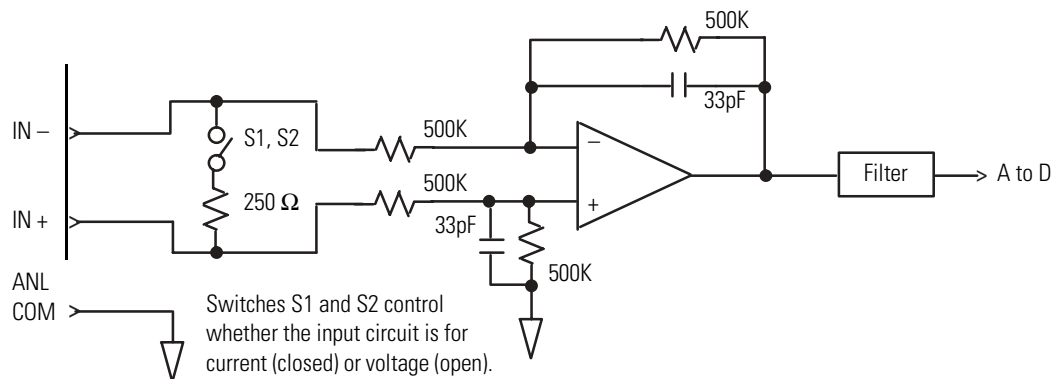

Voltage Output Circuit for 1746-FI04V Modules

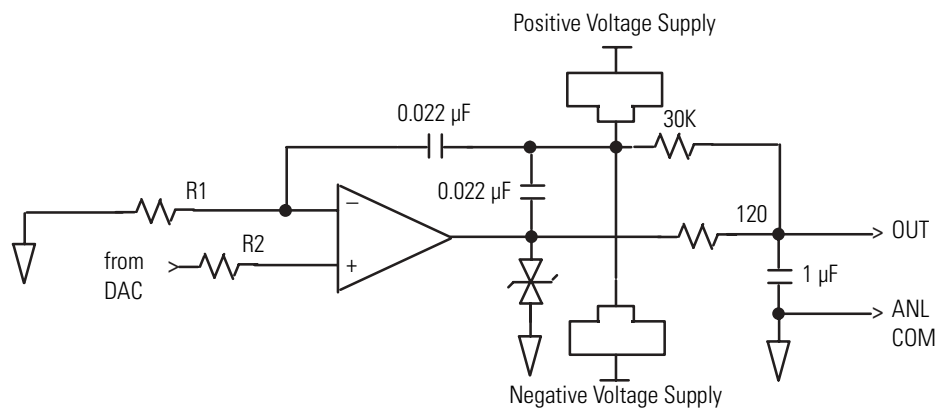

Current Output Circuit for 1746-FIO4I Modules

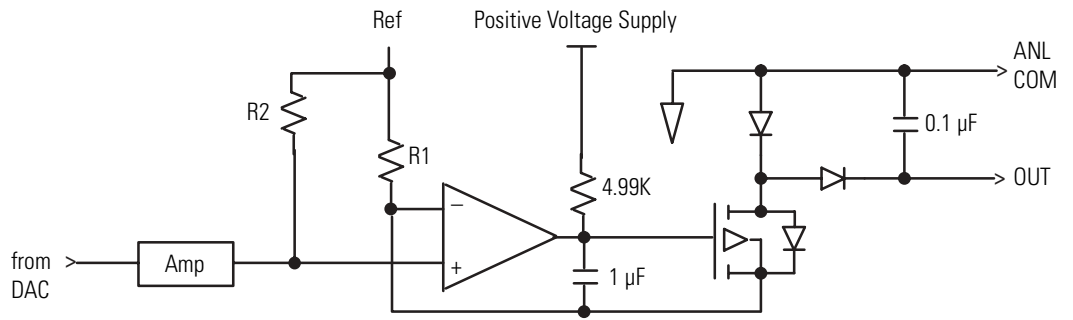

Numerics

- 2's complement binary numbers** 83
 - negative decimal values 85
 - positive decimal values 84

A

- address I/O image words** 31
- analog output scale** 47

C

- calculate linear relationship** 45, 47
- calculate out of range limits** 45
- calibrate analog input channel** 62
 - calibration procedure 66
 - example program 62
- calibrate the module** 61
- calibration tradeoffs** 61
- clear output** 41
- compatibility with other I/O modules** 12
- compute analog input signal level** 33
- compute analog output** 34
- configure I/O**
 - access 23
- configure input channels** 13
- consideration when wiring** 16
 - determine cable length 17
 - ground the cable 17
 - system wiring guidelines 16
- convert analog input data** 33
- convert analog output data** 34
- current loop input specifications** 79
- current output specifications FIO4I** 80

D

- detect out of range condition** 44
- detect out of range input** 41
- determine cable length** 17
- determine module power requirements** 11
- disconnect analog process control devices** 68

E

- electrical noise**
 - minimize 18

G

- general description** 77
- general input specifications** 78
- ground loops**
 - minimize 20
- ground the cable** 17

I

- input channel filtering** 36
- input channels**
 - configure 13
- inspect module switches and wiring** 68
- install module** 11, 14

L

- label terminal block** 21
- ladder logic** 39

M

- maintenance and safety** 75
- minimize ground loops** 20
- minimize noise** 18
- module**
 - test 67
- module considerations** 29
 - channel converters data resolution 32
 - compute analog input signal level 33
 - compute analog output 34
 - convert analog input data 33
 - convert analog output data 34
 - input channel filtering 36
 - module ID code 38
 - response to slot disable 37
 - safe state for outputs 38
 - time delay for A/D conversion 37
- module I/O channel converters data resolution** 32
- module ID code** 38
- module input circuits** 87
- module installation** 14
- module operation**
 - test 67
- module output circuits** 87
- module specifications** 77
- monitor analog I/O data** 30

N

non-retentive analog output 40
non-retentive programming 39

P

PID control with analog I/O scaling 56
ladder logic 57
power requirements
determine 11
power up the I/O rack 69
preventive maintenance 75
processor considerations 29
address I/O image words 31
monitor analog I/O data 30
update of analog I/O data 30
processor update of analog I/O data 30

Q

quick start 7
procedures 8

R

range check and scale analog input for an output 52
calculate linear relationship 52
ladder logic 53
required equipment 7
required tools 7
response to slot disable 37
retain an analog output 40
retentive programming 39
retain an analog output 40

S

safe state for outputs 38
safety considerations when troubleshooting 76
scale analog input 44
calculate linear relationship 47
ladder logic 48
scale analog output 47
scale offsets 49
ladder logic 51
scaling inputs and outputs 42
select I/O rack slot 14
slot disable 37
specifications 77
system wiring guidelines 16

T

terminal block
label 21
test analog inputs 70
test analog outputs 72
test module operation 67
test SLC 500 system 67
test the module
disconnect analog process control devices 68
inspect module switches and wiring 68
power up the I/O rack 69
test analog inputs 70
test analog outputs 72
time delay for A/D conversion 37

V

voltage input specifications 78
voltage output specifications FIO4V 81

W

wire module 11, 18
write ladder logic 39



How Are We Doing?

Your comments on our technical publications will help us serve you better in the future. Thank you for taking the time to provide us feedback.

You can complete this form and mail (or fax) it back to us or email us at RADocumentComments@ra.rockwell.com

Pub. Title/Type SLC 500 Fast Analog I/O Module

Cat. No. 1746-FIO4I and 1746-FIO4V Pub. No. 1746-UM009B-EN-P Pub. Date September 2007 Part No. XXXXXX-XX

Please complete the sections below. Where applicable, rank the feature (1=needs improvement, 2=satisfactory, and 3=outstanding).

Overall Usefulness 1 2 3 	How can we make this publication more useful for you?		
Completeness 1 2 3 (all necessary information is provided)	Can we add more information to help you?		
	procedure/step	illustration	feature
	example	guideline	other
	explanation	definition	
Technical Accuracy 1 2 3 (all provided information is correct)	Can we be more accurate?		
	text	illustration	
Clarity 1 2 3 (all provided information is easy to understand)	How can we make things clearer?		
Other Comments	You can add additional comments on the back of this form.		

Your Name _____
 Your Title/Function _____
 Location/Phone _____


Would you like us to contact you regarding your comments?
 No, there is no need to contact me
 Yes, please call me
 Yes, please email me at _____
 Yes, please contact me via _____

Return this form to: Rockwell Automation Technical Communications, 1 Allen-Bradley Dr., Mayfield Hts., OH 44124-9705
 Fax: 440-646-3525 Email: RADocumentComments@ra.rockwell.com

PLEASE FASTEN HERE (DO NOT STAPLE)

Other Comments

PLEASE FOLD HERE

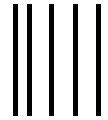

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

PLEASE REMOVE

BUSINESS REPLY MAIL

 
FIRST-CLASS MAIL PERMIT NO. 18235 CLEVELAND OH

POSTAGE WILL BE PAID BY THE ADDRESSEE



**Rockwell
Automation**

1 ALLEN-BRADLEY DR
MAYFIELD HEIGHTS OH 44124-9705



Rockwell Automation Support

Rockwell Automation provides technical information on the Web to assist you in using its products. At <http://support.rockwellautomation.com>, you can find technical manuals, a knowledge base of FAQs, technical and application notes, sample code and links to software service packs, and a MySupport feature that you can customize to make the best use of these tools.

For an additional level of technical phone support for installation, configuration, and troubleshooting, we offer TechConnect Support programs. For more information, contact your local distributor or Rockwell Automation representative, or visit <http://support.rockwellautomation.com>.

Installation Assistance

If you experience a problem with a hardware module within the first 24 hours of installation, please review the information that's contained in this manual. You can also contact a special Customer Support number for initial help in getting your module up and running.

United States	1.440.646.3223 Monday – Friday, 8am – 5pm EST
Outside United States	Please contact your local Rockwell Automation representative for any technical support issues.

New Product Satisfaction Return

Rockwell tests all of its products to ensure that they are fully operational when shipped from the manufacturing facility. However, if your product is not functioning, it may need to be returned.

United States	Contact your distributor. You must provide a Customer Support case number (see phone number above to obtain one) to your distributor in order to complete the return process.
Outside United States	Please contact your local Rockwell Automation representative for return procedure.

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 1746-UM009B-EN-P - September 2007

Supersedes Publication 1746-6.9 - May 1995

Copyright © 2007 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.